

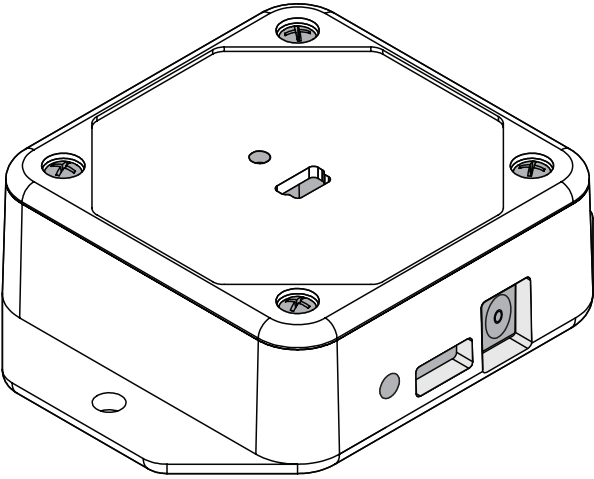
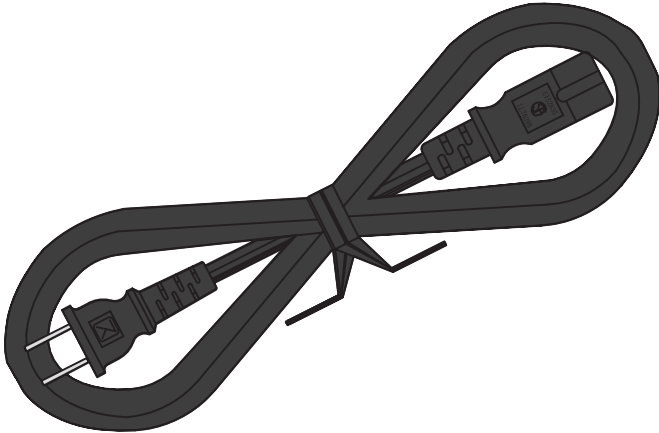
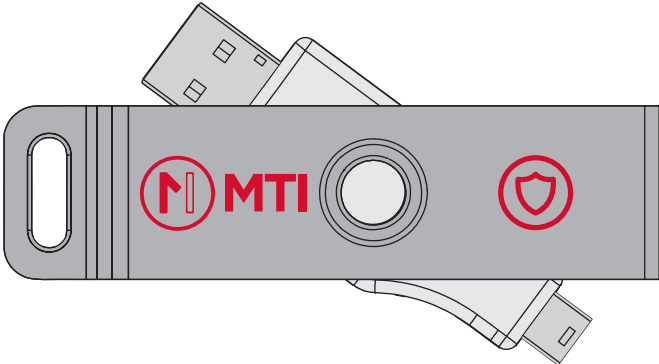



Gateway	Power Cable
	
Manager Key	Power Supply with Cable
	
VHB	
	

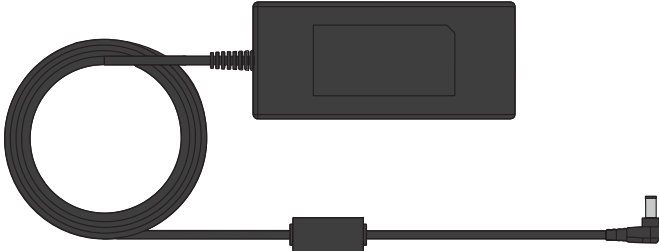


Gateway box should be installed in a back room, not on the retail floor. It is for administration use only.

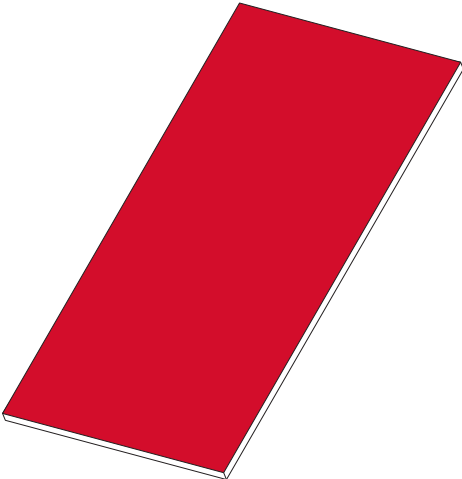


- 1** Remove backing from VHB and attach to the Gateway.

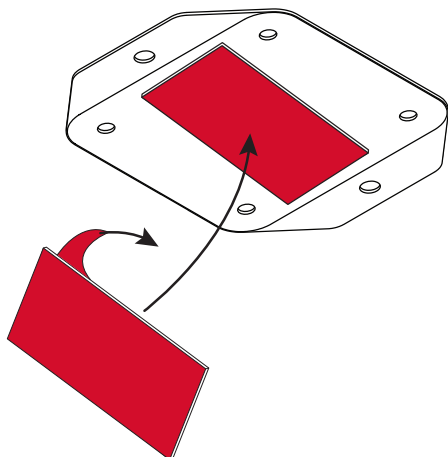


- 2** Remove backing from other side of VHB and place in desired location.

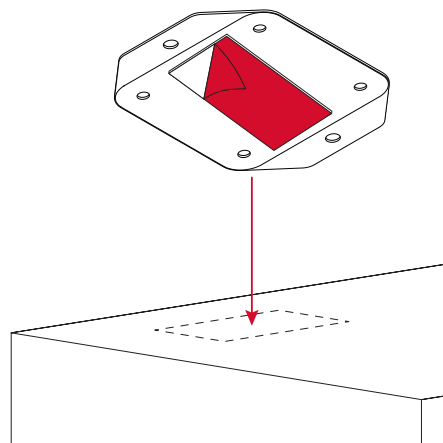


- 3** Plug in the power supply to the back of the Gateway.

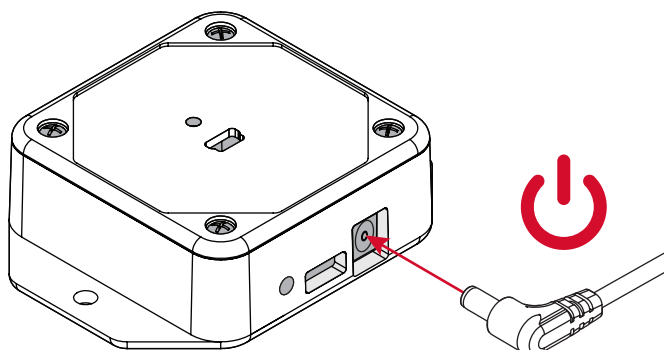

- 4** Connect the power supply and plug it into the nearest outlet.

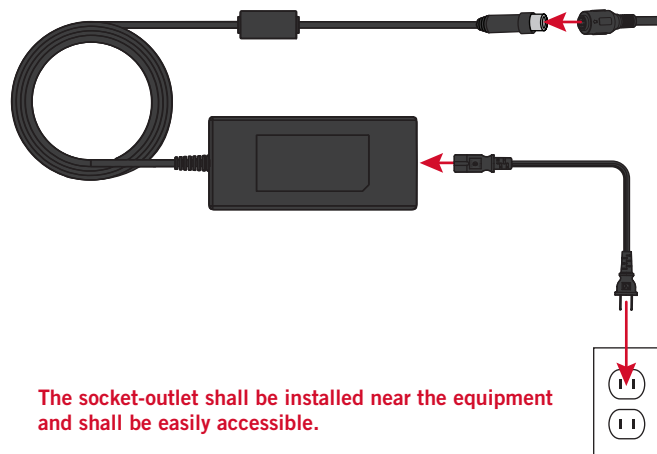


- 5** Wait for Gateway LED to turn green. This process may take up to 2 minutes for system to boot up.





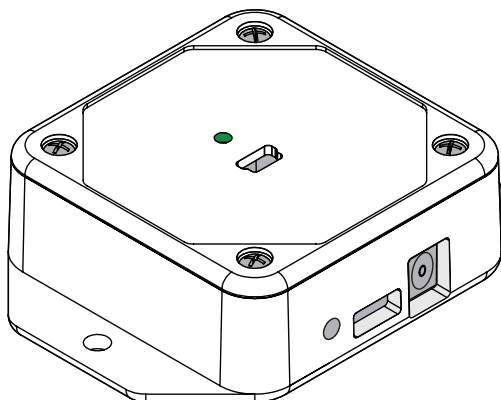


If LED is red, the Gateway needs to be rebooted. Unplug and plug back in to restart.

- 6** Plug Manager Key into top of Gateway. Manager Key LED will turn green if successfully authorized.

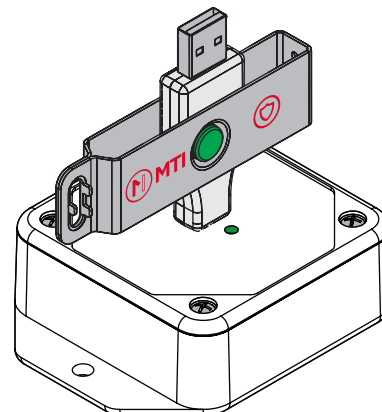

If Manager Key LED turns red, remove the key and reinsert until it turns green.

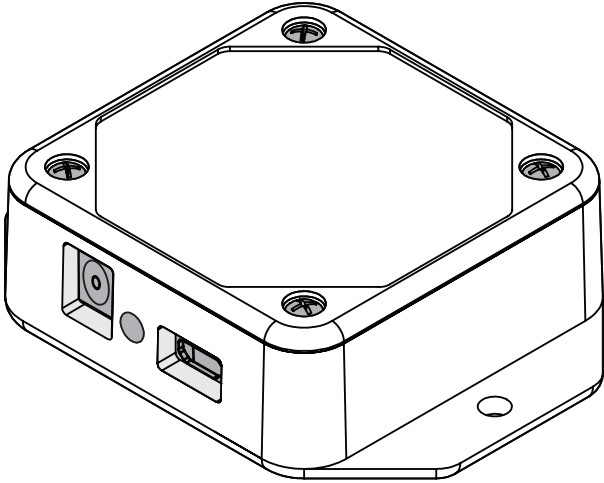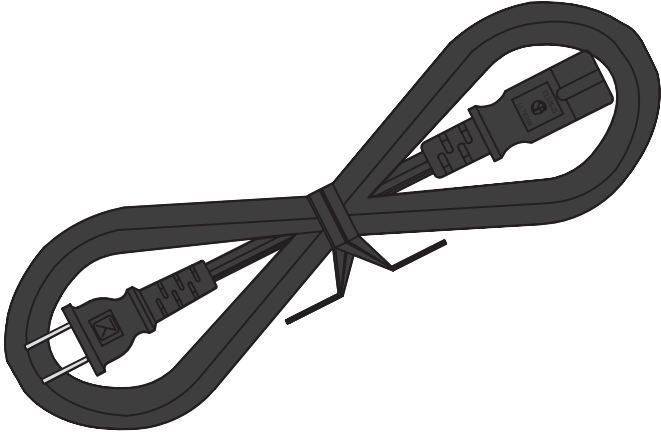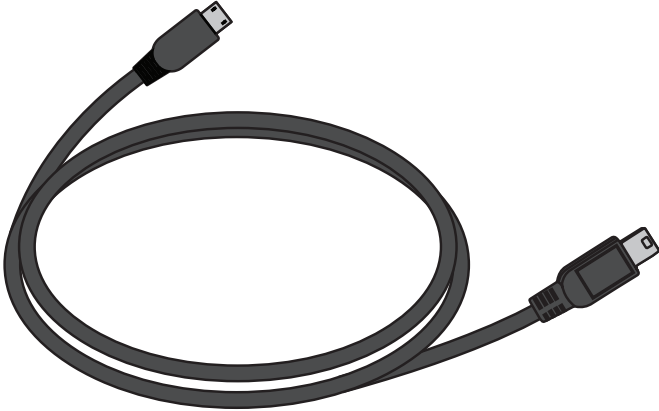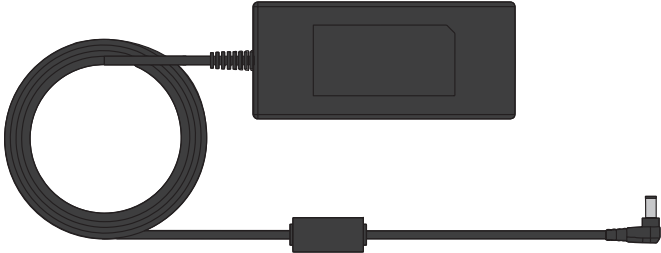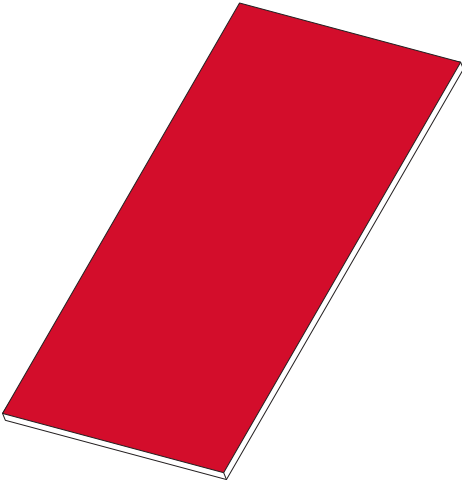
Repeater	Power Cable
	
Repeater Cable (Micro USB to Mini USB)	Power Supply with Cable
	
VHB	
	



The Repeater box is optional and used for extending the range of the Gateway.




- 1** Insert the Micro USB end of the cable into the Repeater and the Mini USB end into the Gateway to initialize setup. The Repeater LED will turn green once initialized.

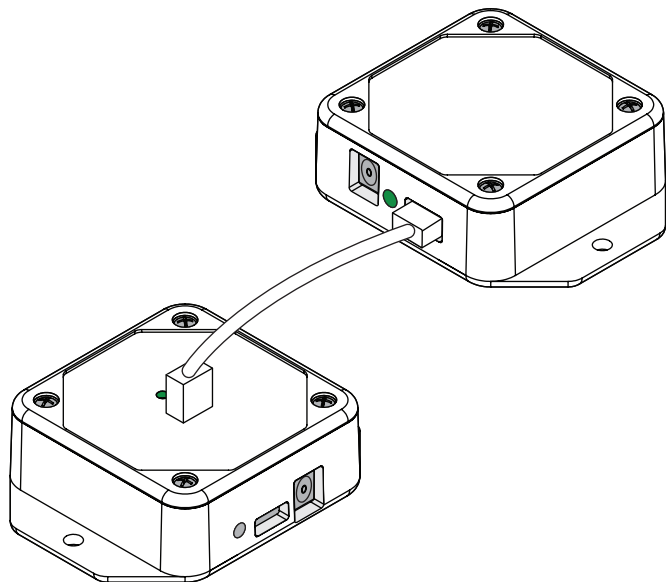


Repeater does not need to be plugged in to initialize.

- 2** Unplug cable from Repeater and move to another location within range of the Gateway. Plug in the power supply to the back of the Repeater and plug it into the nearest outlet. LED will be blue while booting.

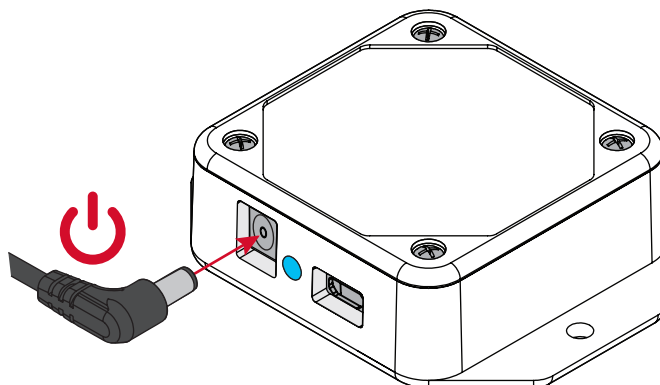


The socket-outlet shall be installed near the equipment and shall be easily accessible.

- 3** Wait for the LED to turn green before mounting permanently.

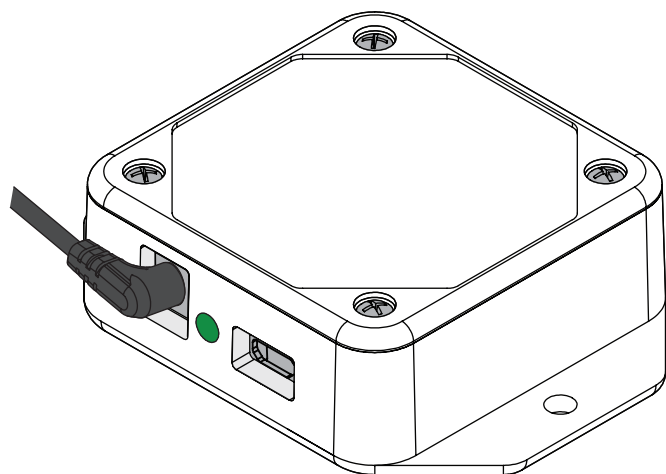

If LED turns red, the Repeater is in a poor location with zero or little communication status with the Gateway. Repeater should be moved to a new location.

- 4** Remove backing from VHB and attach to the Repeater. Remove backing from other side of VHB and place in desired location.

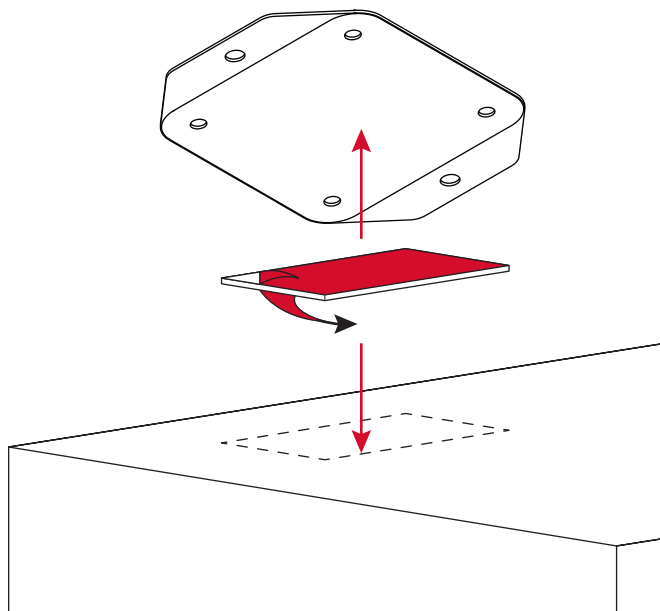

Repeater location should be easily accessible by staff, but not for customers.