

LOOP SENSOR - INSTALLATION

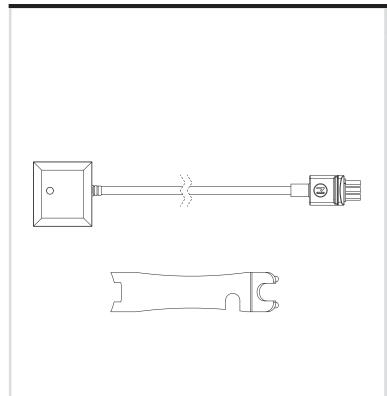


Insert tool into cable housing and push firmly. This will allow cover to open.

 


2

 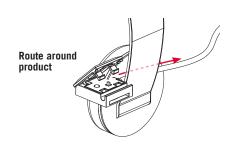


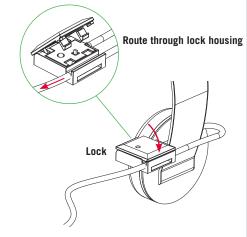

Insert cable into alarm module



Arm alarm module



Ensure housing cover is locked

