


Installation Instructions

Click to see Installation Video

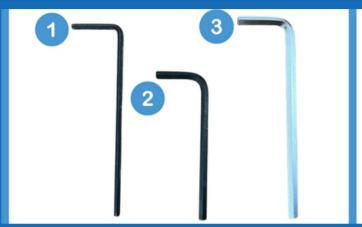

3 Allen keys included in the kit will be used for installation




 Use Allen key #2 to install pencil clasp on adapter plate. The screw for the pencil clasp disc should go on the concave side of the screw hole. The ball at the end of the cable should go right in the center of the circular disc





Should look like this when finished

- 2. Install mounting hardware or VHB to adapter plate.
 - ▶ If installing on an AT&T track fixture, use 2 T-nuts with their enclosed screws in the locations marked "T-Slot Track Mount. "T-nuts should be on the underside of the adapter plate. Leave a little loose; screws will be tightened when the whole assembly is installed on the fixture
 - ▶ If installing on an entertainment fixture (through-hole mount), screw from the top to affix the mount to the adapter plate in the location marked "Center Mount."
 - If installing with VHB, clean the table surface and adapter plate surface with alcohol. Peel the liner off one side of the adhesive and apply to the adapter plate. Apply pressure for approximately 10 seconds to ensure a full bond. Leave the liner on until the last step of installation.

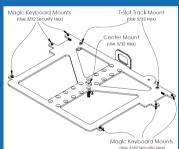









Installation Instructions

3. Connect iPad with Magic Keyboard.



4. Insert charging adapter into the USB-C port on the left side of the Magic Keyboard.



5. Place keyboard onto adapter plate and line up bottom edges.





6. Slide the iPad bracket over the left and right edges of the iPad. Make sure the USB-C port on the right edge of the iPad is accessible.





7. Fold down the iPad and turn the whole thing upside down.







Installation Instructions

8. Using Allen key #1 and 4 of the short black screws, affix the adapter plate to the iPad bracket.





Place the keyboard tabs to clip around the keyboard then use 2 short black screws and Allen key #1 to affix to the adapter plate.





10. Use Allen key #1 to loosen the screw on the pencil clasp by ½
- 1 turn. Install the pencil, aligning the flat edge of the pencil with the flat edge of the clasp. Tighten with Allen key.



- 11. Finish installing onto the fixture:
 - ▶ If installing on an AT&T track fixture, align T-nuts on the underside of the adapter plate with the AT&T track, then drop in. Tighten the screws into T-nuts with Allen key #3.





Installation Instructions

▶ If installing on an entertainment fixture (through-hole mount), use a washer and wingnut to secure under the fixture.



▶ If installing with VHB, peel the liner from the VHB and press the adapter plate to the fixture for at least 10 seconds.



Finished assembly