



Freedom Watch

Installation Guide



Kit Components

ENTERTAINMENT MOUNT



TRACK MOUNT




SLOT MOUNT



SECURITY POST



Add optional rubber strips to bracket for smaller watch models. Some kits may not include rubber strips

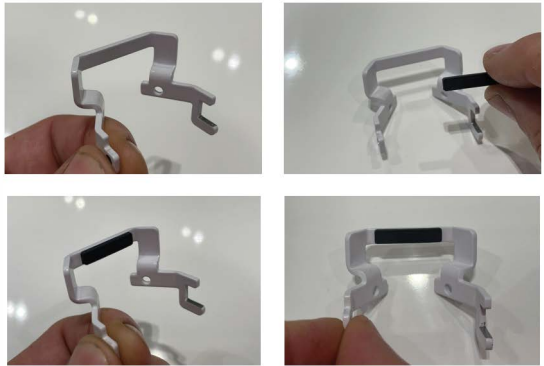


* For merchandising a new watch with new brackets on an existing position, start at Step 4.

Step-by-Step Instructions:

STEP 01

Baseplate next to bottom side of riser post.

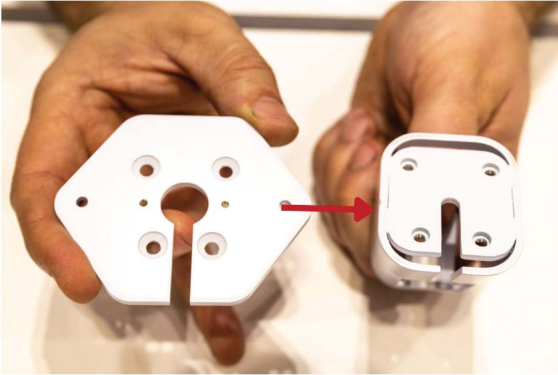


STEP 02

Attach baseplate to riser with four M4 screws with MTI Retail tool. Be sure screws are tight.




STEP 03

Attach track adapter to underside of baseplate with notch in adapter facing towards the cable routing channel in the post.

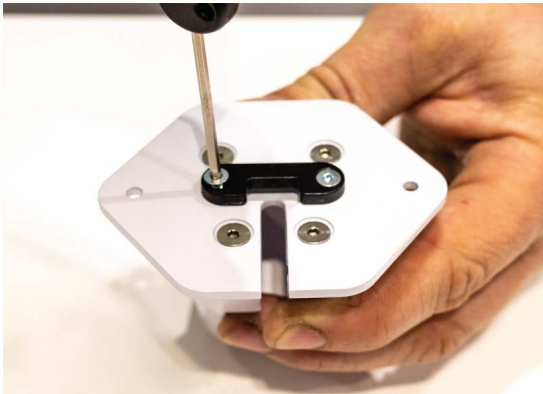

STEP 04

Install watch inductive charger into riser. Start by inserting through hole in back of riser.

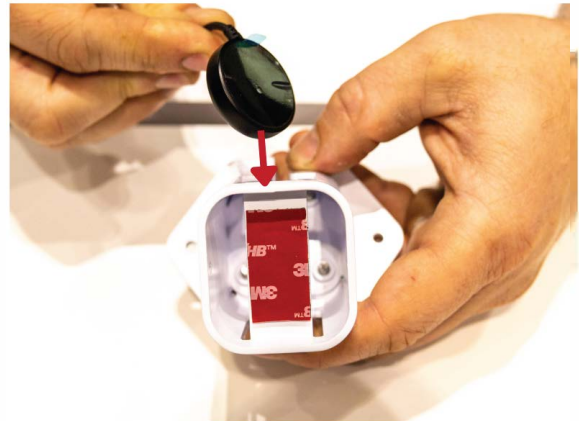

Step-by-Step Instructions:

STEP 05

Feed Inductive charger through one side of the cross bracket. Do not remove liner from VHB pad. Charger will float underneath the watch.



STEP 06

Connect charging cable in correct orientation to watch.



STEP 07

Install watch brackets. They will interlock with each other. Route the cable upwards, keeping it between the two brackets.



STEP 08

Install bracketed watch onto the stand and use the MTI tool to fasten the left-side screw.



STEP 09

Look inside the riser and ensure cable is routed away from right-side screw hole to prevent cable damage when screw is inserted.



Step-by-Step Instructions:

STEP 10


Fasten right-side screw.



STEP 11

Quick check:

- 1) Make sure right-side screw does not press or dig into the cable.
- 2) Plug cable into charging port to confirm charging connection is secure and working.

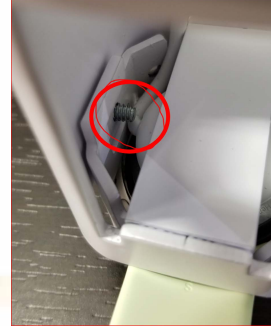

STEP 12

Using 6-32 screws slipped into mounting tabs, install "pills" with the dimples facing up.



STEP 13

Insert riser into slot. Tighten the mounting screws. The metal "pills" will rotate into place to allow them to engage with the fixture.



STEP 14

Plug inductive charger into power brick. Power brick will be plugged into nearby outlet.




Step-by-Step Instructions:

* For merchandising a new watch with new brackets on an existing position, start at Step 4.


STEP 01

Baseplate next to bottom side of riser post.

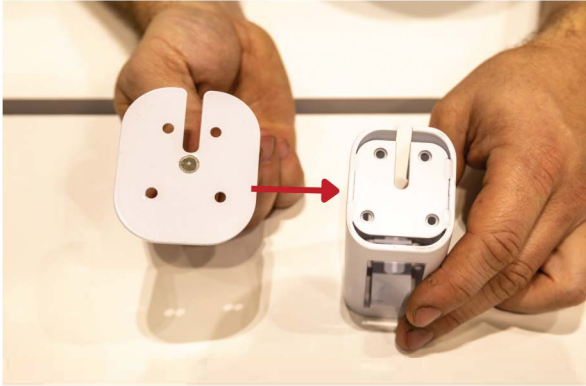

STEP 02

Attach baseplate to riser with four M4 screws with MTI Retail tool. Be sure screws are tight.

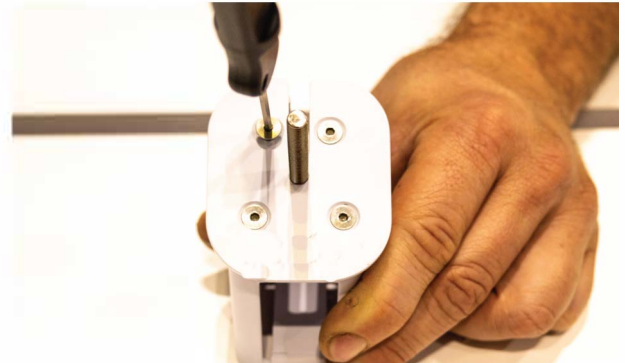

STEP 03

Attach through hole adapter to underside of baseplate with notch in adapter facing towards the cable routing channel in the post.



STEP 04

Install watch inductive charger into riser. Start by inserting through hole in back of riser.



Step-by-Step Instructions:

STEP 05

Feed Inductive charger through one side of the cross bracket. Do not remove liner from VHB pad. Charger will float underneath the watch.



STEP 06

Connect charging cable in correct orientation to watch.



STEP 07

Install watch brackets. They will interlock with each other. Route the cable upwards, keeping it between the two brackets.



STEP 08

Install bracketed watch onto the stand and use the MTI tool to fasten the left-side screw.



STEP 09

Look inside the riser and ensure cable is routed away from right-side screw hole to prevent cable damage when screw is inserted.



Step-by-Step Instructions:

STEP 10


Fasten right-side screw.



STEP 11

Quick check:

- 1) Make sure right-side screw does not press or dig into the cable.
- 2) Plug cable into charging port to confirm charging connection is secure and working.

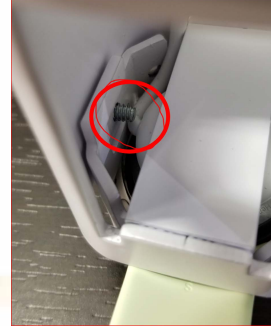

STEP 12

Using 6-32 screws slipped into mounting tabs, install "pills" with the dimples facing up.



STEP 13

Insert riser into slot. Tighten the mounting screws. The metal "pills" will rotate into place to allow them to engage with the fixture.



STEP 14

Plug inductive charger into power brick. Power brick will be plugged into nearby outlet.




Step-by-Step Instructions:

* For merchandising a new watch with new brackets on an existing position, start at Step 4.

STEP 01

Baseplate next to bottom side of riser post.

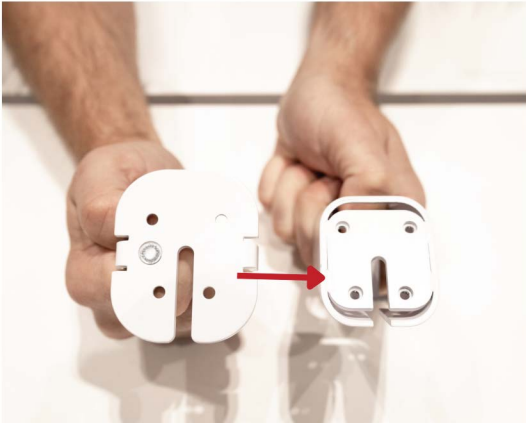

STEP 02

Attach baseplate to riser with four M4 screws with MTI Retail tool. Be sure screws are tight. Slot in baseplate should face towards back of riser.



STEP 03

Install watch inductive charger into riser. Start by inserting through hole in back of riser.



STEP 04

Feed Inductive charger through one side of the cross bracket. Do not remove liner from VHB pad. Charger will float underneath the watch.



Step-by-Step Instructions:

STEP 05

Feed Inductive charger through one side of the cross bracket. Do not remove liner from VHB pad. Charger will float underneath the watch.



STEP 06

Connect charging cable in correct orientation to watch.



STEP 07

Install watch brackets. They will interlock with each other. Route the cable upwards, keeping it between the two brackets.



STEP 08

Install bracketed watch onto the stand and use the MTI tool to fasten the left-side screw.



STEP 09

Look inside the riser and ensure cable is routed away from right-side screw hole to prevent cable damage when screw is inserted.



Step-by-Step Instructions:

STEP 10


Fasten right-side screw.



STEP 11

Quick check:

- 1) Make sure right-side screw does not press or dig into the cable.
- 2) Plug cable into charging port to confirm charging connection is secure and working.

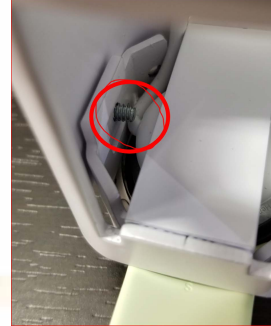

STEP 12

Using 6-32 screws slipped into mounting tabs, install "pills" with the dimples facing up.



STEP 13

Insert riser into slot. Tighten the mounting screws. The metal "pills" will rotate into place to allow them to engage with the fixture.



STEP 14

Plug inductive charger into power brick. Power brick will be plugged into nearby outlet.

