


- 1** Clean the mounting surface with an alcohol wipe and let it dry. Peel the VHB liner from the bottom of the watch stand. Set the stand on the surface and apply firm pressure for 10 seconds to ensure a good adhesive bond.



- 2** Clean the back of the watch with an alcohol wipe and let it dry. Peel the VHB liner off the watch sensor and apply watch sensor to the back of the watch as shown. Make sure the charging pins are NOT obstructed. Apply firm pressure for 10 seconds.



- 3** Peel the VHB liner from the top of the watch stand. Apply the watch charging puck to the stand and apply firm pressure for 10 seconds to ensure a good adhesive bond.

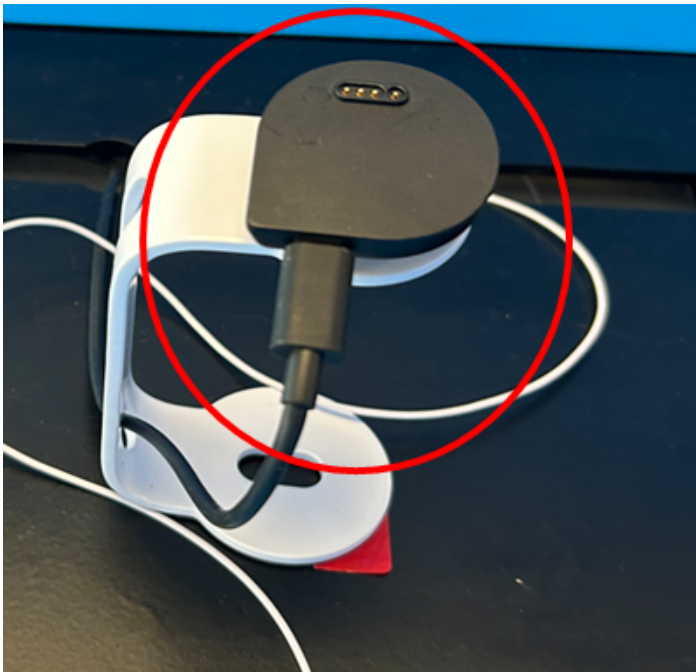

- 4** Set the watch on top of the charging puck, aligning the charging pins. Plug in the other end of the watch sensor cable into an existing Core II module port.

