
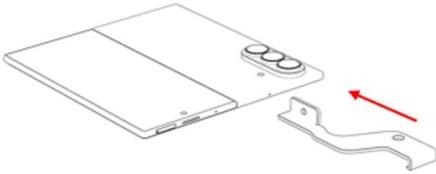
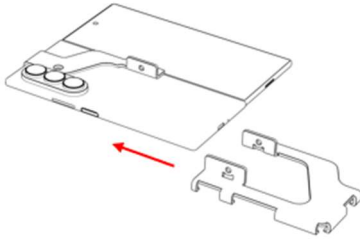
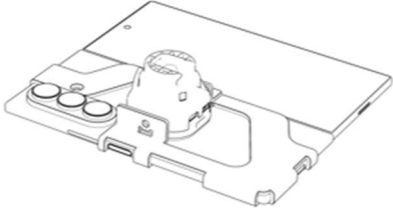
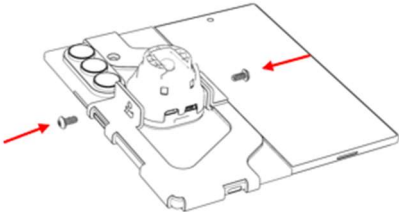


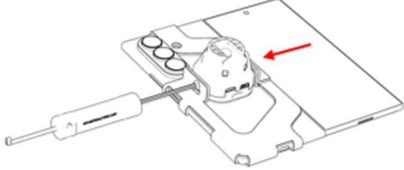

## INSTALLATION GUIDE: FREEDOM MICRO, CUSTOM BRACKET, SAMSUNG Q7 FOLD

|                                                                                                                                                                                                |                                                                                                                                          |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>1</b> Slide North arm onto device as shown.</p>                                                         | <p><b>2</b> Slide South arm onto device as shown.</p>  |
| <p><b>3</b> Prepare puck for installation.</p>  <p>Remove Old VHB    Apply New VHB    Peel Release Liner</p> | <p><b>4</b> Insert puck.</p>                         |
| <p><b>5</b> Insert 2 screws.</p>                                                                            | <p><b>6</b> Tighten 2 screws.</p>                    |

7

Attach tether, then dock and arm system.

