

SAMSUNG



Micro I Flip5 Bracket

Installation Guide





Kit Components



NOTES BEFORE INSTALLING: Do not overtighten screws. Overtightening screws may damage the threads on devices and MTI products. Disable alarm before installation and enable alarm after installation is complete.

- (1) VHB with Transfer
- (2) Bracket A
- (3) Bracket B
- (4) Security Screws


- Also needed:
- (A) Double-Sided System Tool
 - (B) Alcohol Wipe
 - (C) Freedom Micro Puck

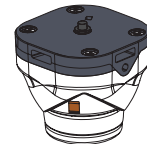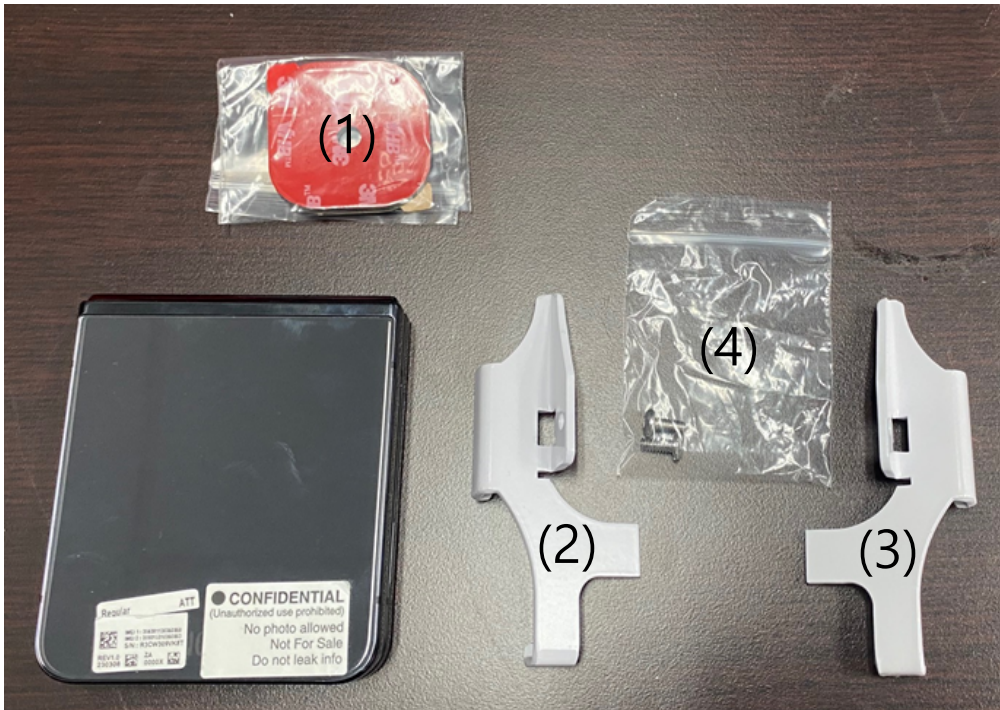

Step-by-Step Instructions:


STEP 01

Clean rear side of phone with Alcohol wipe:

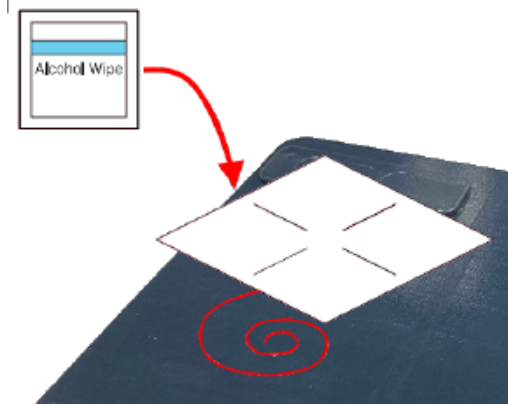

STEP 02

Apply new VHB pad to a clean Freedom Micro Puck:

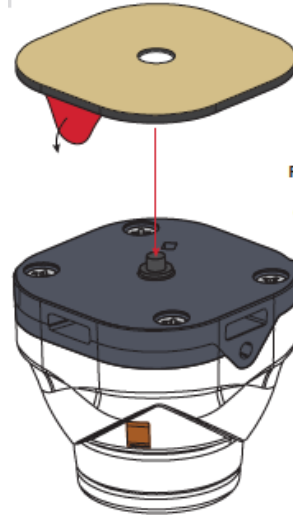

 Red side of VHB should face puck, tan side should face device for proper adhesion.

STEP 03

Assemble Bracket A and B to the lower half of the phone as shown:




STEP 04

With the phone slightly unfolded, ensure the brackets are snug against the left and right sides of the device:



Step-by-Step Instructions:

STEP 05 Remove liner from VHB pad:

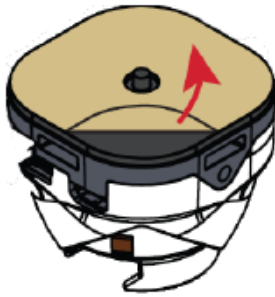


STEP 06

Tighten security screw using system tool:

NOTE: Ensure puck power port aligns with phone charge port, as shown:



STEP 07 Tighten second screw:

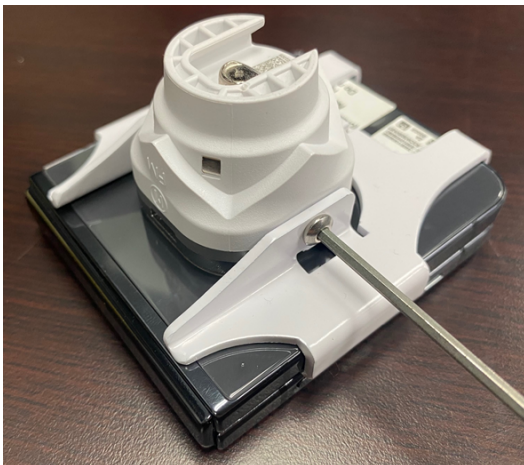

STEP 08 Install puck to riser:

