

SAMSUNG



Micro I Fold5 Bracket

Installation Guide




Kit Components



NOTES BEFORE INSTALLING: Do not overtighten screws. Overtightening screws may damage the threads on devices and MTI products. Disable alarm before installation and enable alarm after installation is complete.

- (1) VHB with Transfer
- (2) Bracket A
- (3) Bracket B
- (4) Security Screws


- Also needed:
- (A) Double-Sided System Tool
 - (B) Alcohol Wipe
 - (C) Freedom Micro Puck

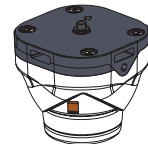

Step-by-Step Instructions:


STEP 01

Clean rear side of phone with Alcohol wipe:

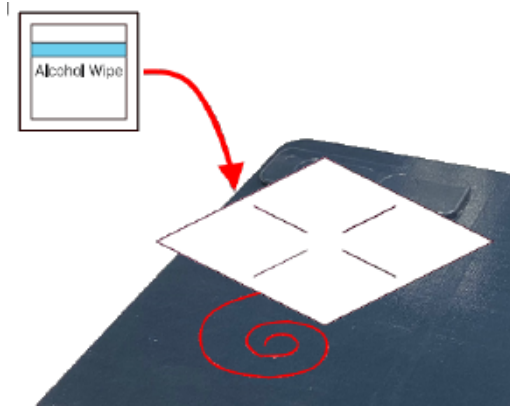

STEP 02

Apply new VHB pad to a clean Freedom Micro Puck:

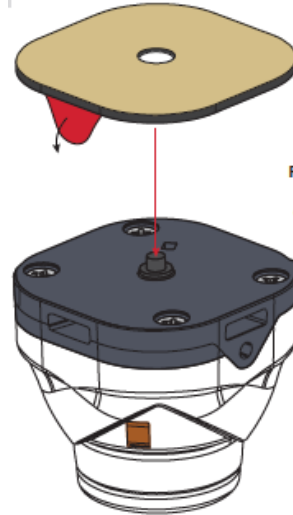

Red side of VHB should face puck, tan side should face device for proper adhesion.

STEP 03

Assemble Bracket A and B to the right side of the phone, as shown:




STEP 04

Keep the phone in its folded position for steps 5 through 7.

This will provide the best access to the security screws for tightening

Step-by-Step Instructions:

STEP 05 Remove liner from VHB pad:

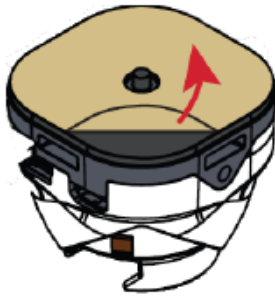

STEP 06 Tighten security screw using system tool:



STEP 07

Tighten second screw:

NOTE: Ensure puck power port aligns with phone charge port



STEP 08

Install puck to riser:

