


Generic Wing Bracket


NOTE: Full VHB adhesion takes a total of 24 hours.

NOTES BEFORE INSTALLING: Do not to overtighten screws. Using excessive force when tightening screws damages the threads on devices and Freedom products. Clean back of device with alcohol wipe.


1

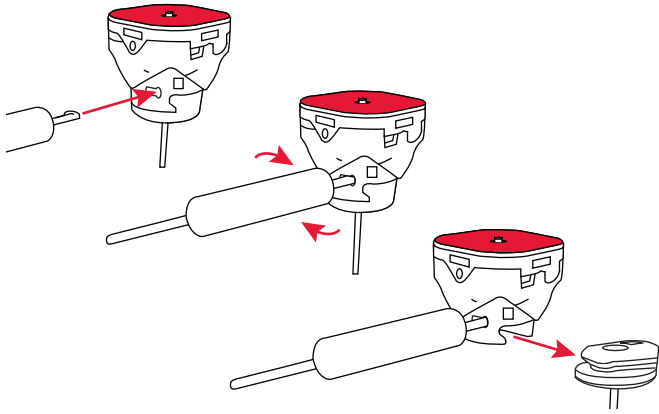


2

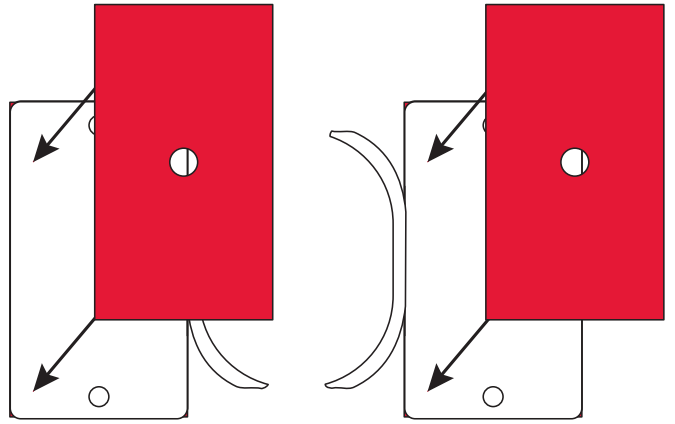


3

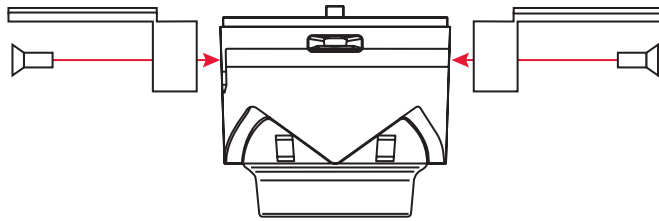

4

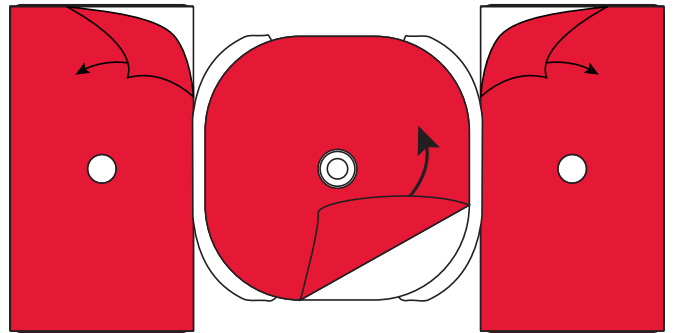

5

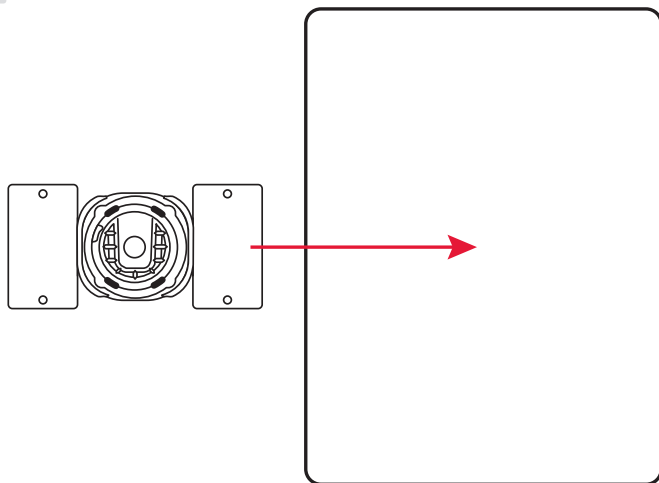

6

