




1

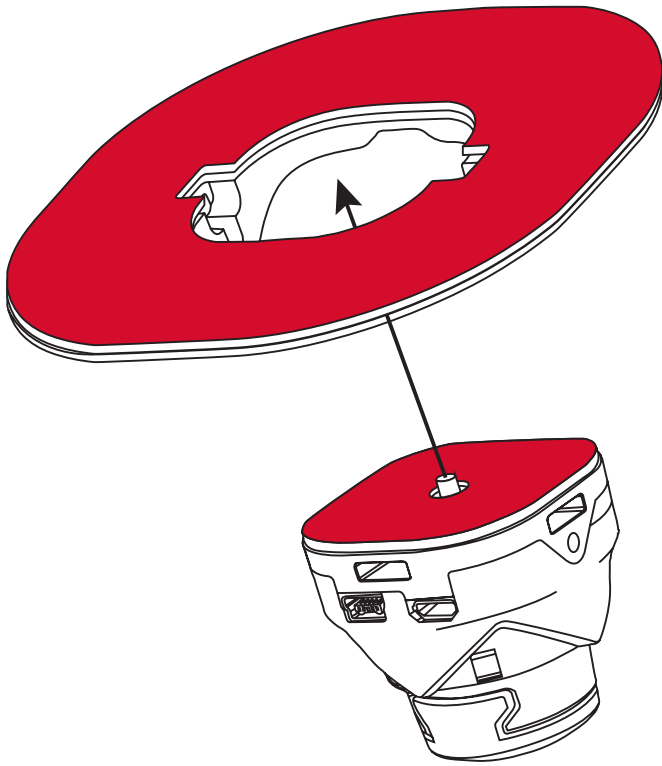


2

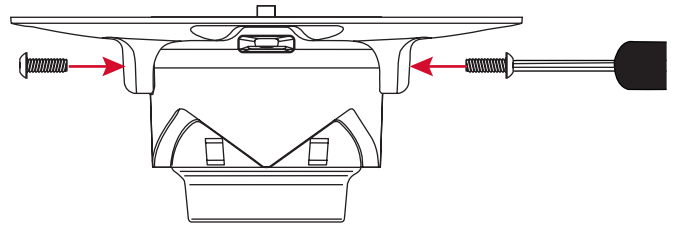

3

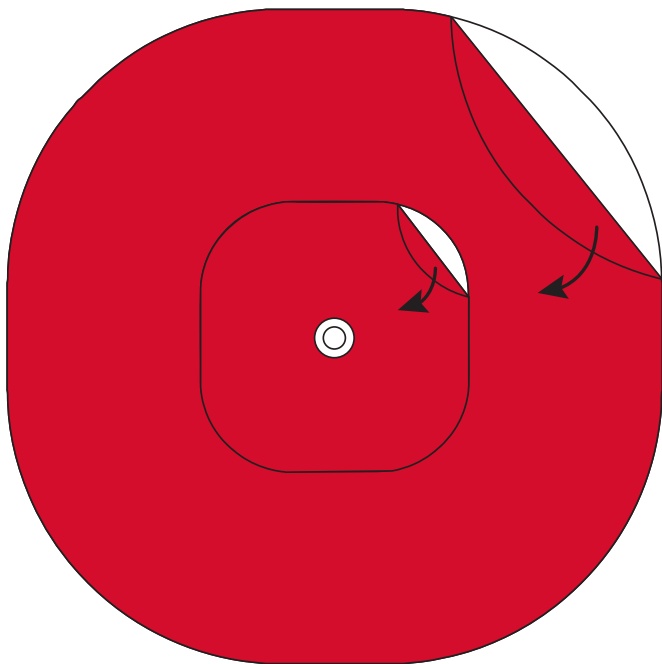

4

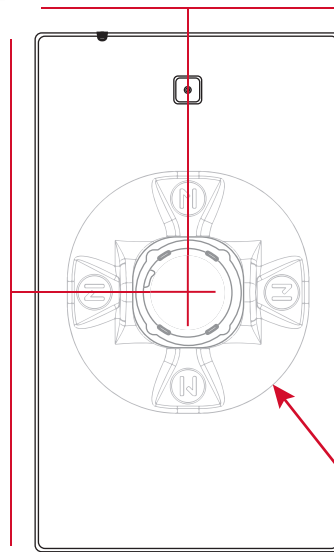

After placing the bracket, hold down for 10 seconds to ensure full placement of the VHB.

