



## Installation Instructions


1. To mount bracket to fixture, remove wingnuts and washers. Fully extend the legs by using the press buttons.

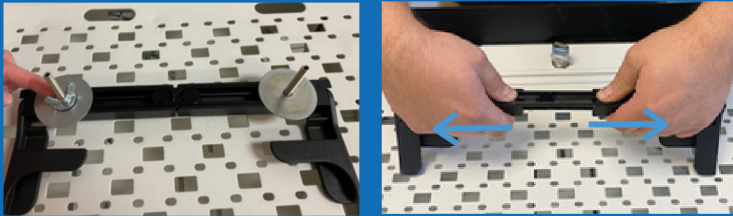

2. Make sure legs are facing forward before mounting to the fixture.

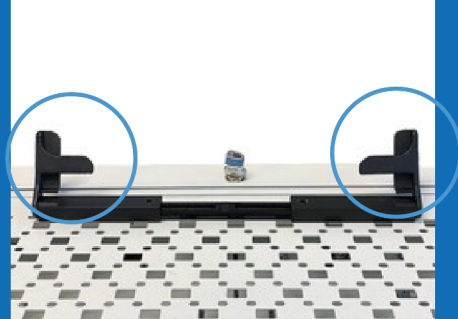

3. Align the studs with the fixture holes and insert the bracket into the fixture.

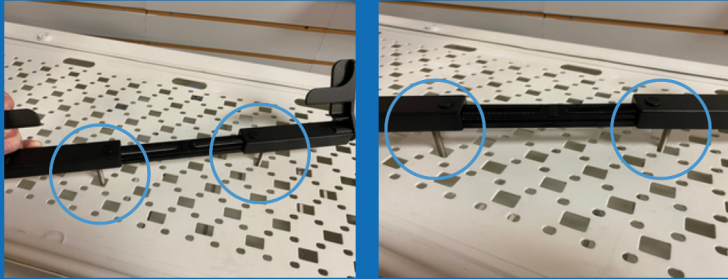

4. Use under counter washers and wingnuts to secure to the fixture.



5. Center the laptop between legs. Align the bottom edge of the left side of the laptop with the crease in the leg.



6. Once the left leg is flush to the Scorpion, press in on the right leg to fully secure the device.

