

Freedom Micro II Google Pixel Fold Speedbracket

Installation Guide



Design



Kit Components



Additional Required Items (not included)

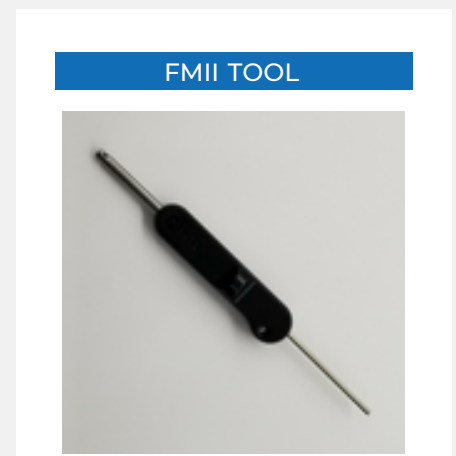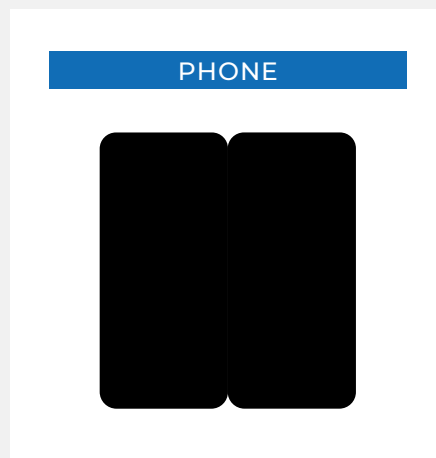

Step-by-Step Instructions:

STEP 01

Do NOT remove VHB adhesive pad liner when using bracket with with dummy phone!



STEP 02


Loosen rear screw(s) of SpeedBracket:



NOTE: Top & bottom arms shall remain fully collapsed through the installation process!

STEP 03

Extend upper and lower bracket arms to allow phone to be inserted:

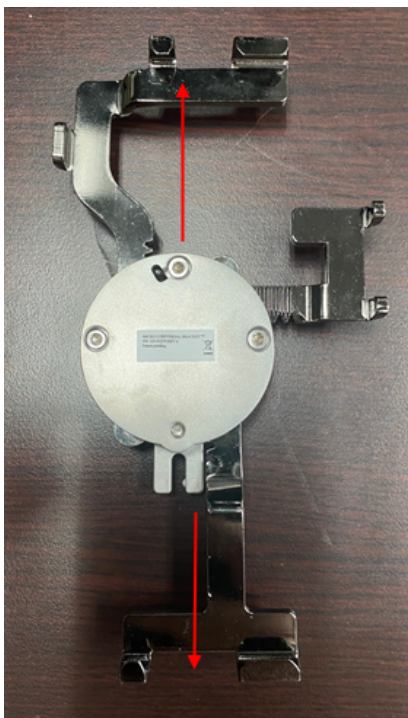

STEP 04

Install bracket to phone, aligning with side arm as shown below:



Step-by-Step Instructions:

STEP 05

Press upper and lower arms tightly against phone sides and tighten screw(s). Note: SpeedBracket may have either one or two screws - tighten both, if present.



STEP 06

Install SpeedBracket to riser and rotate into place, until a 'click' is heard. Refer to standard SpeedBracket manual for troubleshooting, as needed.

STEP 07

Plug in phone charging cable.

