

Freedom Micro II Samsung Fold 5/6 Speedbracket

Installation Guide



Kit Components

MICRO II SAMSUNG FOLD SPEEDBRACKET OPTIONS

SKU 165-01352



SKU 165-01385




Both of these brackets are compatible with the phone.

Additional Required Items (not included)

ALCOHOL WIPE



PHONE

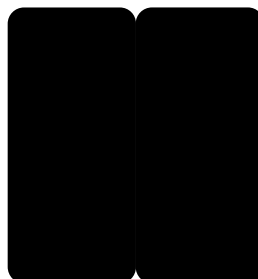

FMII TOOL



Step-by-Step Instructions:

STEP 01

Clean the back of the phone with the alcohol wipe and let it dry. Peel off the adhesive liner on the bracket, unless this bracket is being used with a dummy phone.



STEP 02

Place the phone on the bracket with the edge of the phone flush against the side arm. Press the adhesive firmly against the back of the phone for 10 seconds minimum.



STEP 03

Using the MTI tool, loosen the 2 screws on the back of the medallion. Push in top and bottom bracket arms snug to the phone.



STEP 04

Tighten both screws on the back of the medallion.



FINISH

Install SpeedBracket to riser and rotate into place, until a 'click' is heard. Wiggle the bracket to confirm the bracket is locked onto the puck. Then plug in charging cable.