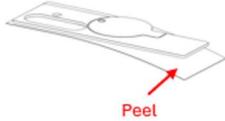
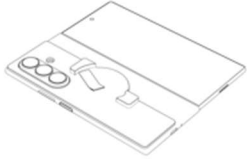
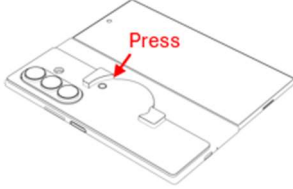
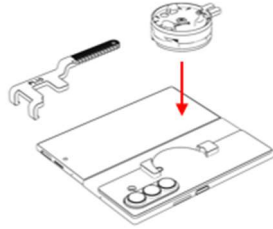

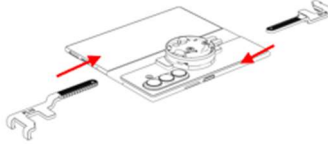

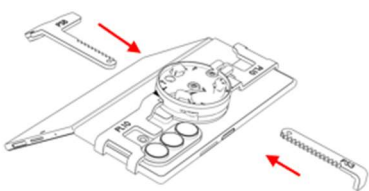
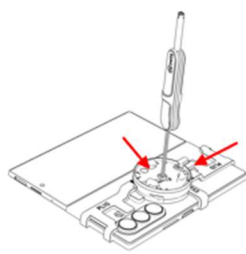




INSTALLATION GUIDE: FREEDOM MICRO II, FOLD BRACKET FILLER PLATE, SAMSUNG Q7 FOLLD

<p>1 Pull release liner.</p> 	<p>2 Align opening in filler plate over camera and sides of phone, then press firmly down on device back.</p> 
<p>3 Press firmly on tape covering the pill, then remove tape.</p> 	<p>4 Slide one bracket into medallion and test fit onto filler plate.</p> 
<p>5 Remove VHB liner and use bracket to help align medallion.</p> 	<p>6 Pull bracket out and then insert both PL22 brackets at the same time.</p> 

<p>7 Slide in PS3 bracket.</p> 	<p>8 For angled back support models, insert PS3 and PS8 brackets at the same time.</p> 
<p>9 Hold all arms tightly in place and tighten 2 screws using MTI tool.</p> 	<p>10 Mount to Freedom Micro II puck and riser.</p> 