
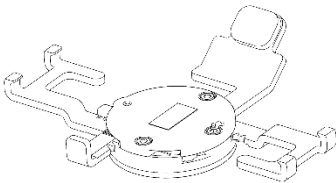
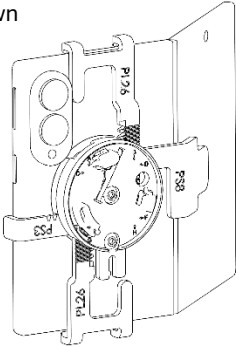
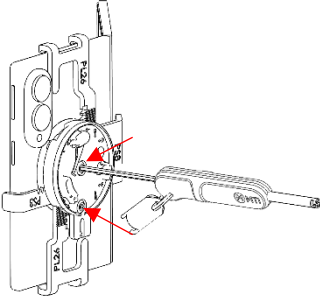
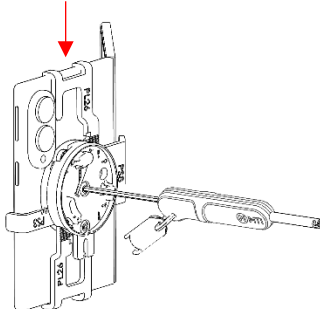


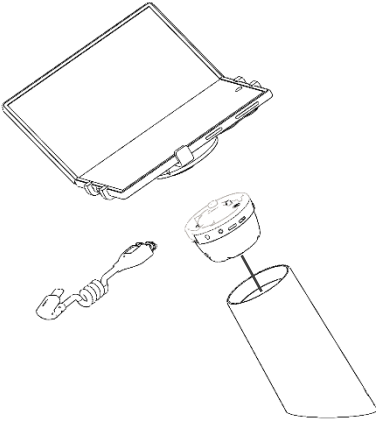

INSTALLATION GUIDE: FREEDOM MICRO II, CUSTOM BRACKET, SAMSUNG FOLD 8

<p>1 Remove bracket assembly from packaging</p> 	<p>2 Bend phone slightly, set bracket assembly against back of phone as shown</p> 
<p>3 Use tool to loosen 2 screws</p> 	<p>4 Press down on top bracket and tighten 2 screws. Ensure arms are snug against the edges of the phone.</p> 
<p>5A</p> <p>For Freedom Mirco 2 system:</p> <ul style="list-style-type: none">• Set on puck top, aligning the arrow with the open circle and rotate to closed circle to lock onto puck,• Connect charging smart cable,• Dock puck, and arm system, ensure system arms and phone is charging 	<p>5B</p> <p>For Freedom Power Flex system:</p> <ul style="list-style-type: none">• Set assembly on Power Flex adapter, aligning the arrow with the open circle and rotate to closed circle to lock onto adapter• Dock phone and adapter into riser, ensure beep and LED lights solid white• Connect charging smart cable. Ensure phone is charging 