

Occasionally, having the SpeedBracket medallion centered on the device may cover or partially cover a needed button on the edge of the phone. In those cases, the SpeedBracket can be offset on the device. The instructions below show the steps to offset up/ down. The same steps can be used to offset left/ right.

[Click Here for Video](#)



- 1** Using the Freedom Micro II tool, loosen the 2 security screws on the back of the medallion to loosen the bracket arms.




- 2** Slide the top (PL1) and bottom bracket (PL2) arms all the way out.




- 3** Place the side bracket arms (PS1) on the device, lining up with where they need to fit on the phone.




- 4** Slide in only the bottom bracket arm (PL2) part way, not all the way flush with the device.

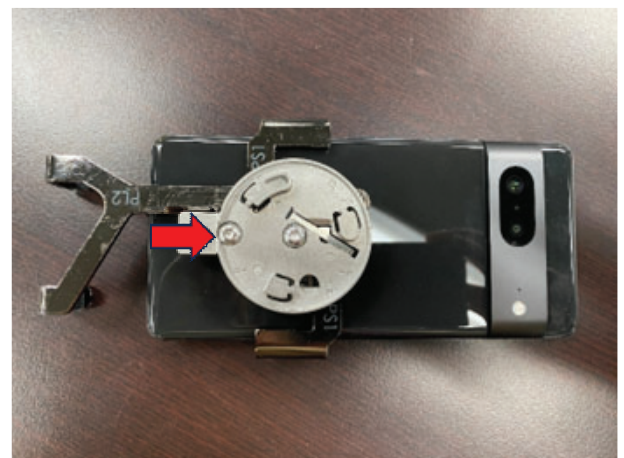

5 Then, start to slide in the top bracket arm.

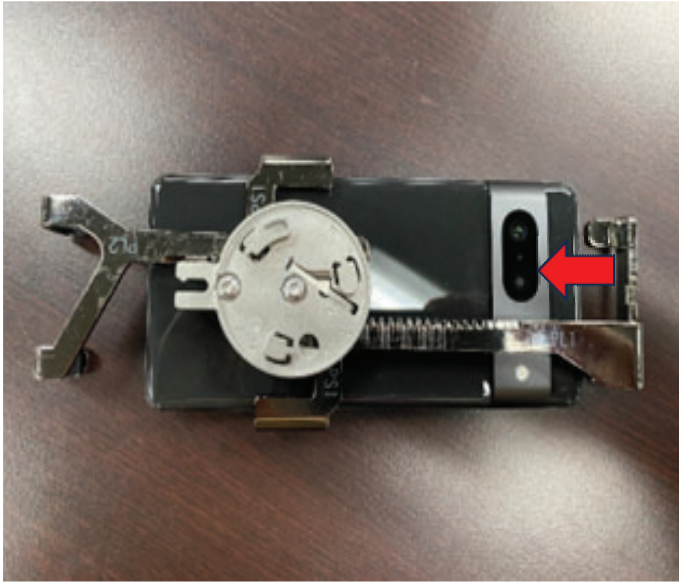

6 Slide both arms inwards and fit all bracket arms snugly around the device.

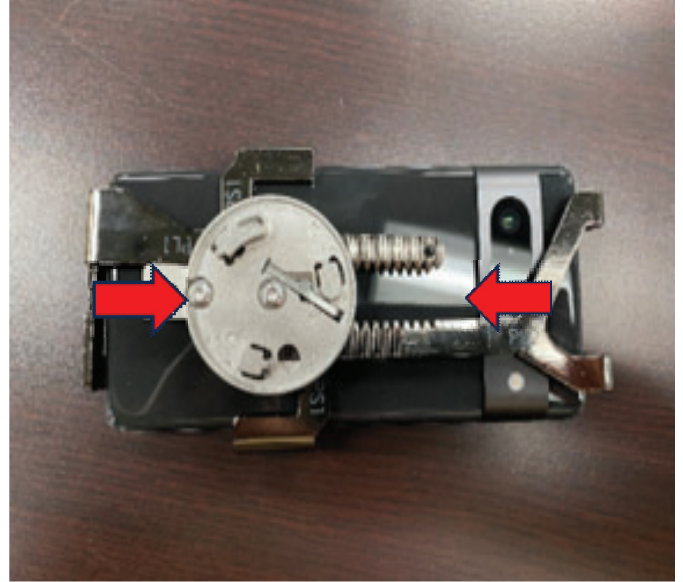

7 Make sure the bracket arms are not obstructing any needed buttons on the edge of the phone. If further adjustment is needed, repeat above steps until the bracket arms are lined up where they need to be.



8 Tighten the 2 security screws on the back.

