


Steps for installing Rotation Hard Stop onto Freedom Micro II


Part Number 165-01183



1. Remove the bracket from the puck before installing the Hard Stop
2. Clean the back of the riser with alcohol wipe to prepare for VHB, be sure the surface is dry before applying VHB

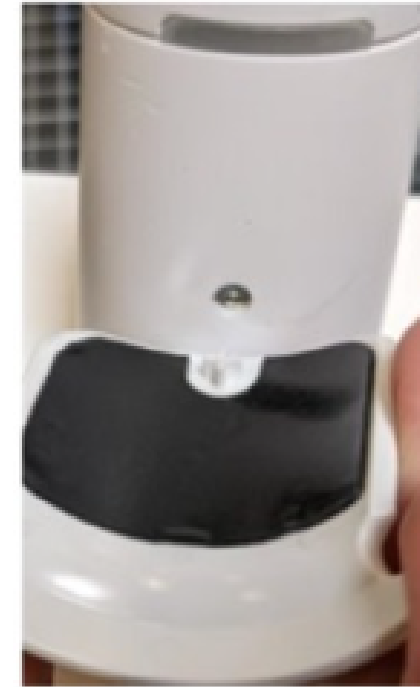

3. Align guide pin with hole in back of riser. Keep aligned vertically with riser.

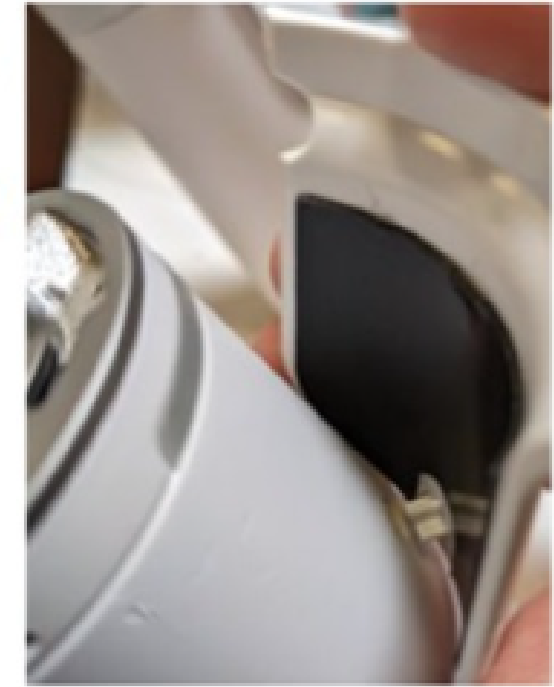

4. Press and hold the VHB onto the riser for 10 seconds



5. Attach Device and Bracket back onto the puck.

