


Spiral Anti-Sweep Hook - Narrow Round Hood Style

Bracket for Madix Bar


INSTALL

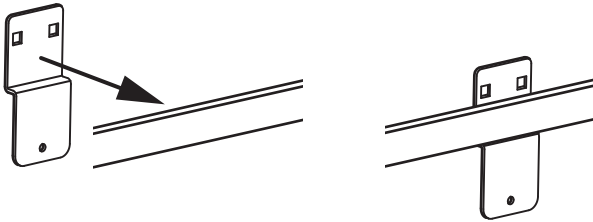

1 Place Bracket behind the bar as shown.

HARDWARE:


Tool Needed:
Phillips
Screwdriver

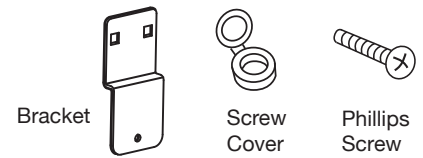

2 Insert hooks into Adapter holes and follow your plan-o-gram layout.

LOCK DOWN

3 Thread the Screw Cover and Phillips Screw into the Hook and Bracket holes. Tighten with a Phillips Screwdriver. Close Screw Cover Cap when finished.

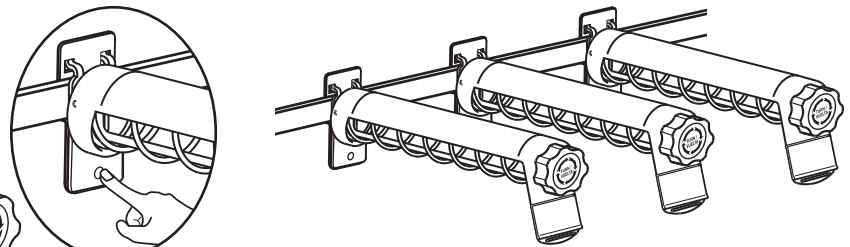


4 Allow enough space between the displays so that product does not touch the surface below or obstruct other merchandise.

LOADING MERCHANDISE

5 Insert the merchandise by following the ramp upwards until product stops, then turn the knob **counter clockwise until product catches hook.**

Thin packages:
ONE COMPLETE ROTATION provides the position for loading the next package.


Thick packages:
TWO COMPLETE ROTATIONS are required.
Repeat Step 5 and 6 for loading the rest of the merchandise.

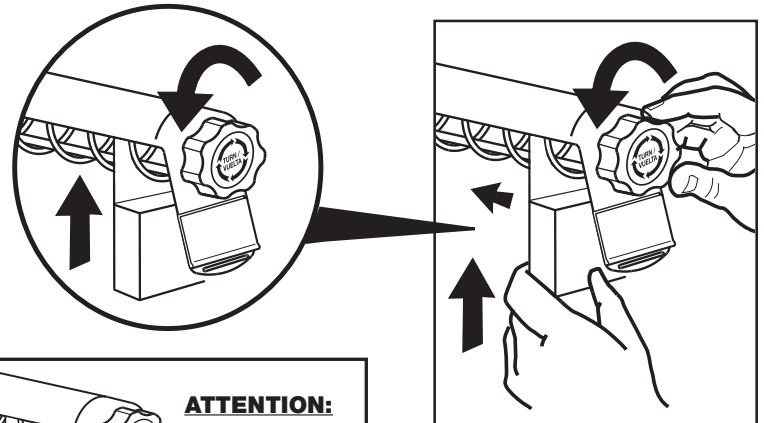

WARNING: Do not overturn coil. Product will go all the way off the rear of the coil and become inaccessible.




ATTENTION:
Keep product
faced to the
front.

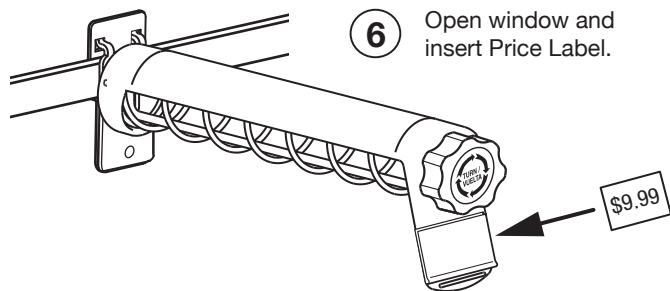

6 Open window and insert Price Label.

DISPENSING MERCHANDISE

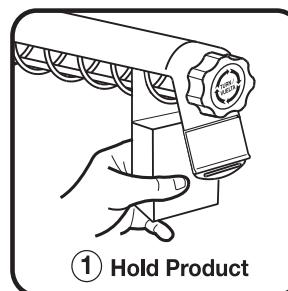

1 Hold Product



2 Turn Knob to Release