



**1** Clean mounting surface with alcohol wipe.



**2** Peel liner off of recoiler adhesive and stick to mounting surface.

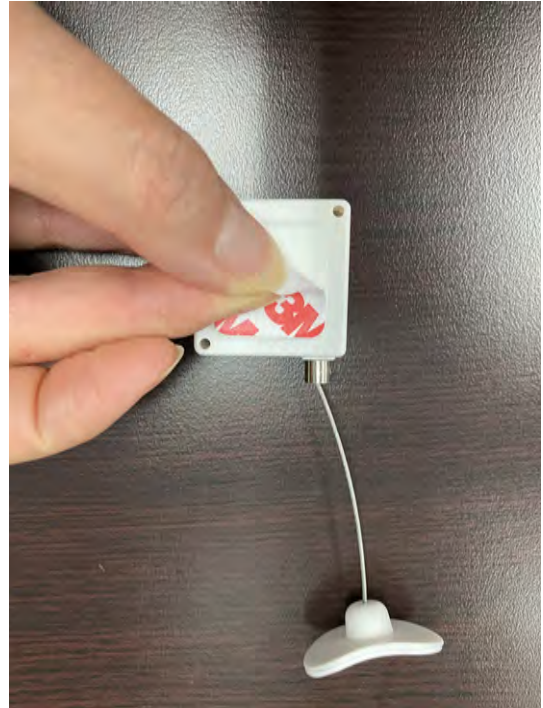

 **Mounting surface must be smooth, flat, and larger than the adhesive surface area.**

**3** Press recoiler against mounting surface for approximately 10 seconds to ensure full surface bond.



**4** Let adhesive bond cure for 24 hours before use.

