


## Installation Instructions on a Track Fixture

[Click to see Install Video](#)



3 Allen keys included in the kit will be used for installation

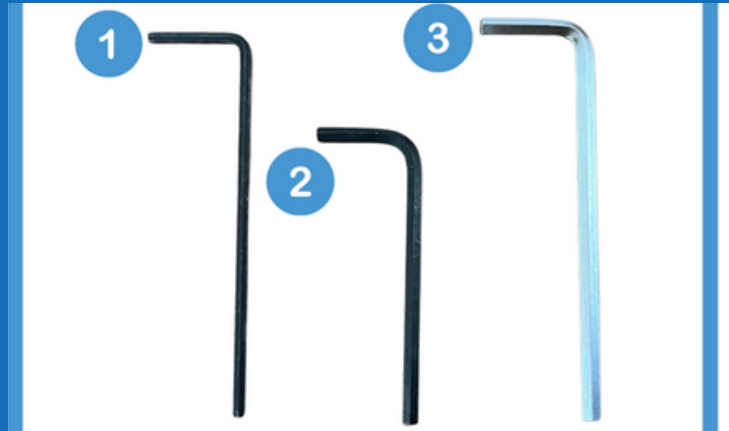


1. Use Allen key #2 to install pencil clasp on adapter plate in the center hole at the top. The screw for the pencil clasp disc should go on the concave side of the screw hole. The ball at the end of the cable should go right in the center of the circular disc.



Should look like this when finished

2. Install 2 T-nuts to the adapter plate with the 2 black screws. T-nuts should be on the underside of the adapter plate. Leave a little loose; screws will be tightened when the whole assembly is installed on the fixture.

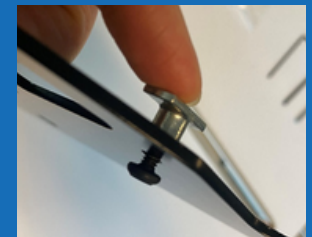

3. Extend all 3 legs of the tablet bracket by opening button covers, pushing the buttons and fully extending the legs, then closing the button covers



## Installation Instructions on a Track Fixture

4. Slide iPad into tablet bracket with the 3 connection points to the keyboard on the bottom. Center the iPad then push both side bracket legs in at the same time.



5. Flip tablet over so that back legs face up. Connect tablet bracket to adapter plate using the 2 short and thick silver screws and Allen key #3.



6. Turn the whole assembly over so it's upright. Slide keyboard in to connect with iPad, aligning the magnetic connectors. Then, push down the top leg of the tablet bracket to be snug with the top of the iPad.



7. Place keyboard security bar over the keyboard and attach to adapter plate using the remaining 2 short silver screws and Allen key #2. Position the edge of the assembly over the edge of the table to install the screws.



8. Align T-nuts on the underside of the adapter plate with the AT&T track, then drop in.




## Installation Instructions on a Track Fixture

9. Tighten the screws into T-nuts with Allen key #3.



10. Use Allen key #1 to loosen the screw on the pencil clasp by 1-2 turns, install the Apple Pencil, then tighten the screw.

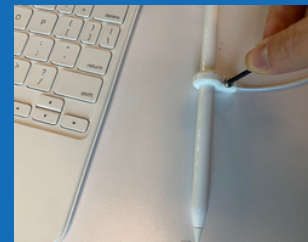

11. Plug in charger and connect to iPad.



Finished assembly

## Installation Instructions on an Entertainment Fixture (Through -Hole Mount)

1. Use Allen key #2 to install pencil clasp on adapter plate in the center hole at the top. The screw for the pencil clasp disc should go on the concave side of the screw hole. The ball at the end of the cable should go right in the center of the circular disc.




Should look like this when finished

2. Use the parts in the bag marked "Mounting Hardware (Entertainment Fixture)." Place the circular mounting adapter on a flat surface with the 2 prongs facing up. Align the corresponding holes on the bottom side of the adapter plate. Apply downward pressure on top of the adapter plate to secure the parts together.



3. Take the bolt and screw into the circular mounting adapter by hand. Tighten it using Allen key #3.

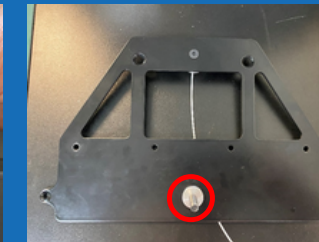

This is what the underside of the adapter plate should look like when finished

4. Extend all 3 legs of the tablet bracket by opening button covers, pushing the buttons and fully extending the legs, then closing the button covers.




## Installation Instructions on an Entertainment Fixture (Through -Hole Mount)

5. Slide iPad into tablet bracket with the 3 connection points to the keyboard on the bottom. Center the iPad then push both side bracket legs in at the same time.




6. Flip tablet over so that back legs face up. Connect tablet bracket to adapter plate using the 2 short and thick silver screws and Allen key #3

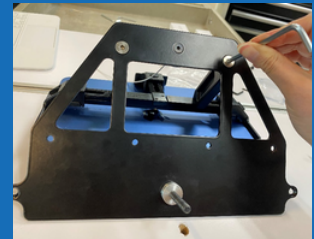

7. Turn the whole assembly over so it's upright. Slide keyboard in to connect with iPad, aligning the magnetic connectors. Then, push down the top leg of the tablet bracket to be snug with the top of the iPad.




8. Place keyboard security bar over the keyboard and attach to adapter plate using the remaining 2 short silver screws and Allen key #2. Position the edge of the assembly over the edge of the table to install the screws.

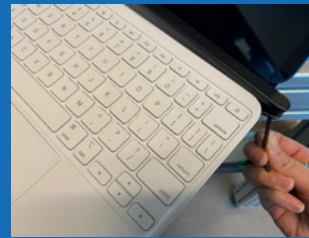

9. Insert the setup into the through-hole on the fixture then affix using the washer and flanged wing nut.



10. Use Allen key #1 to loosen the screw on the pencil clasp by 1-2 turns. Install the pencil and tighten.

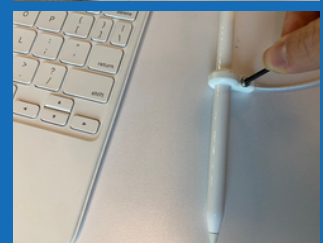

11. Plug in charger and connect to iPad.