

Installation Instructions

[Click to see Installation Video](#)



2 Allen keys included in the kit will be used for installation


1



2




1. Use Allen key #1 enclosed with the Pencil Kit to install pencil clasp on adapter plate. The pencil clasp disc goes on the top of the adapter plate; screw in from underneath. The ball at the end of the cable should go right in the center of the disc.

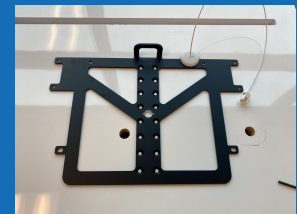

2. Install mounting hardware or VHB to adapter plate.

- ▶ AT&T track fixture: Use 2 T-nuts with their enclosed screws in the locations marked "T-Slot Track Mount." T-nuts should be on the underside of the adapter plate. Leave a little loose; screws will be tightened when the whole assembly is installed on the fixture
- ▶ Entertainment fixture (through-hole mount): Insert the circle piece with 2 prongs into the underside of the adapter plate in the location marked "Center Mount." Screw in from the top using Allen key #2.
- ▶ VHB: Clean table surface and adapter plate with alcohol. Peel the liner off one side of the adhesive and apply to the bottom side of the adapter plate. Apply pressure for 10 seconds to ensure a full bond. Leave the liner on until the last step of installation.

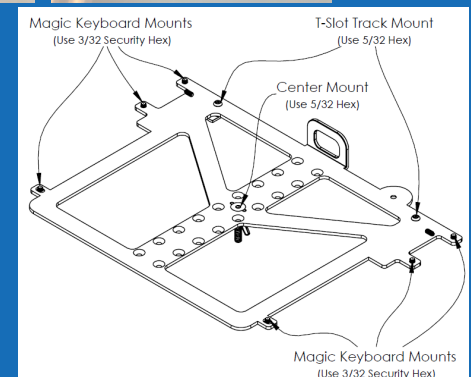


Installation Instructions


3. Connect iPad with Magic Keyboard.



4. Insert charging adapter into the USB-C port on the left side of the Magic Keyboard.

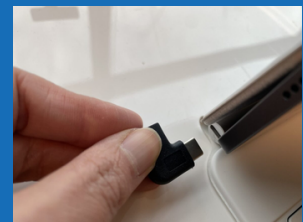

5. Place keyboard onto adapter plate and line up bottom edges.

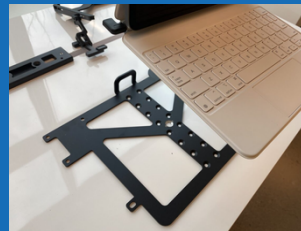

6. Slide the iPad bracket over the left and right edges of the iPad. Push in each side to fit the bracket over the edge of the iPad. Make sure the USB-C port on the right edge of the iPad is accessible.




7. Fold down the iPad and turn the whole thing upside down.



Installation Instructions

8. Take 4 short black screws and use Allen key #1 to affix the adapter plate to the iPad bracket.

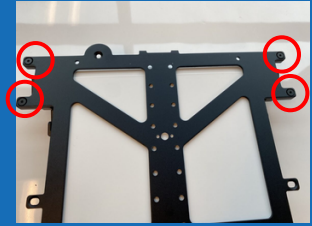

9. Place the keyboard tabs to clip around the keyboard then use 2 short black screws and Allen key #1 to affix to the adapter plate.



10. Use Allen key #1 to loosen the screw on the pencil clasp by $\frac{1}{2}$ - 1 turn. Install the pencil, aligning the flat edge of the pencil with the flat edge of the clasp. Tighten with Allen key.



11. Finish installing onto the fixture:

- If installing on an AT&T track fixture, align T-nuts on the underside of the adapter plate with the AT&T track, then drop in. Tighten the screws into T-nuts with Allen key #2.



Installation Instructions

▶ If installing on an entertainment fixture (through-hole mount), use a washer and wingnut to secure under the fixture.



▶ If installing with VHB, peel the liner from the VHB and press the adapter plate to the fixture for at least 10 seconds.



Finished assembly