APPLE WATCH SECURITY - PARTS REQUIRED
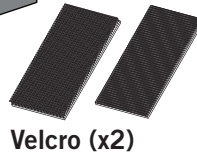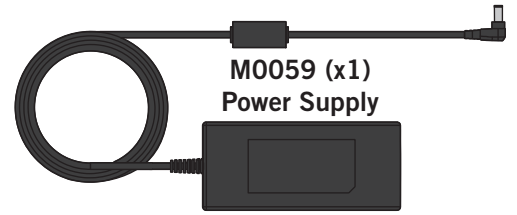
MTI
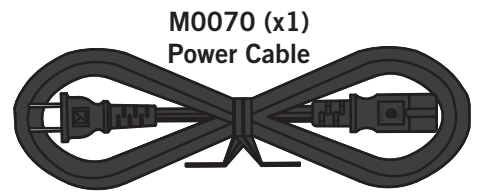
M0025
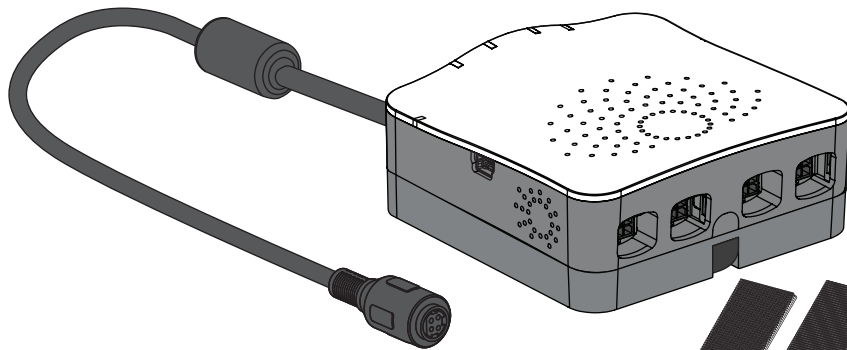
(x1)
**White Core II Alarm Module
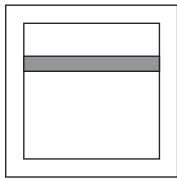with Power Booster**

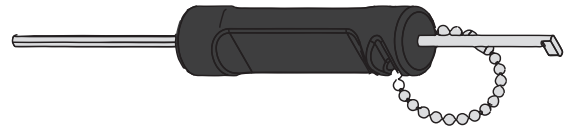**Velcro (x2)**

**M0059 (x1)
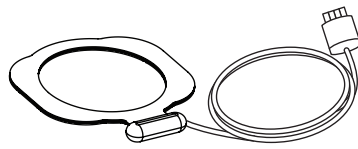Power Supply**

**M0070 (x1)
Power Cable**

**M0056 (x1)
Alcohol Wipe**

**M0057 (x1)
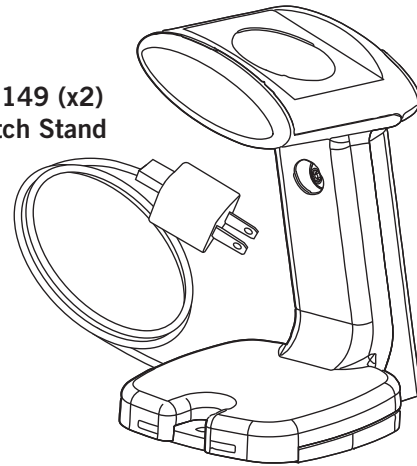Double-Sided System Tool**

**CHOOSE
ONE**

**M0431 (x2)
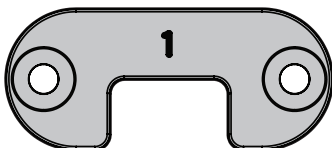Disposable Watch Sensor, White**

**M0428 (x2)
Disposable Watch Sensor, Black**

**M0149 (x2)
Watch Stand**

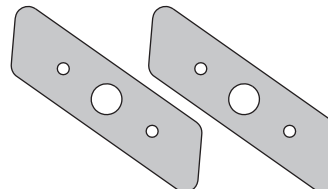**M0001 - Watch Stand Track Adapter Kit (Merchandises 1 Watch Stand)**

Spacer Adapter 1 (x1)
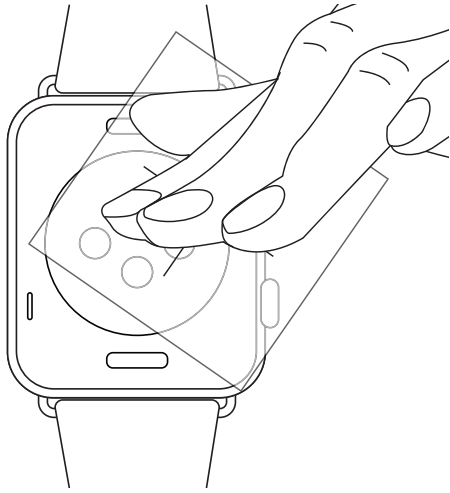
1

Spacer Screws (x2)

Track Mounting Tabs (x2)

**Mounting Tab
Screws Long (x2)**

DISPOSABLE WATCH SENSOR

MTI

1 | Clean the device with an alcohol wipe and let dry.
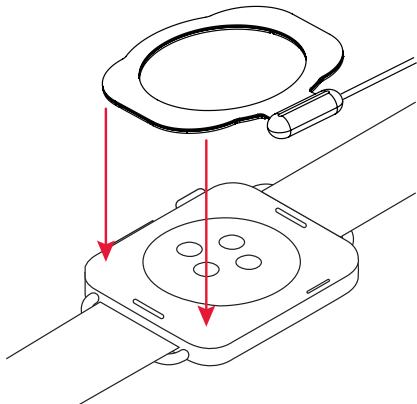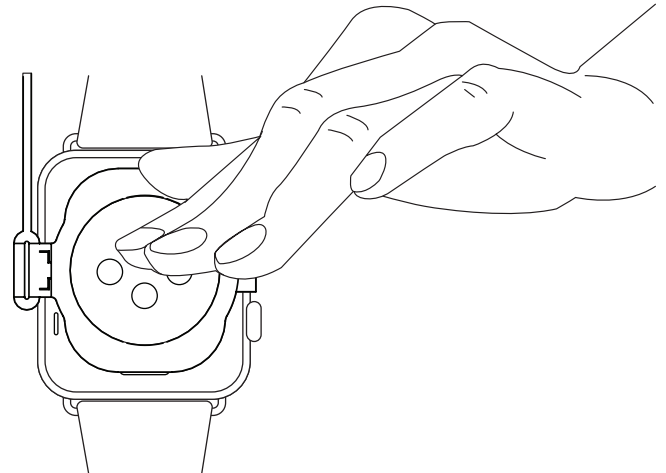
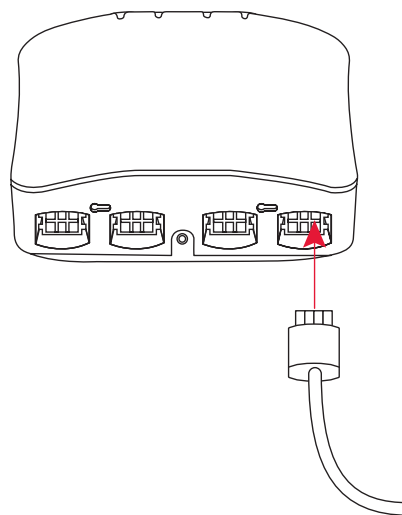**2** | Peel VHB on the watch sensor.
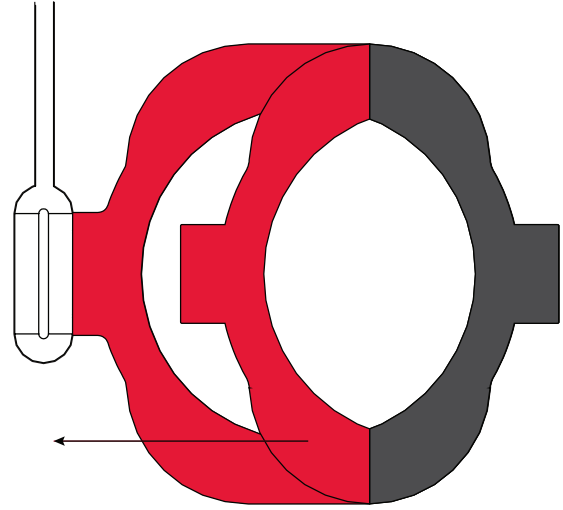
3 | Place on the back of the device with the wire pointing off of the top of the device.

4 | Press down for 10 seconds. Refer to AT&T merchandising guidelines for final fixture integration.
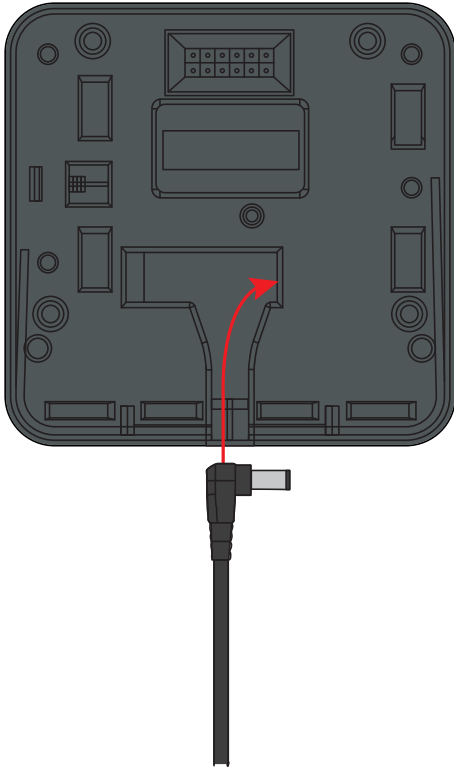
5 | If using Freedom Core II™ insert the 6-pin Molex end of the sensor into the Freedom Core II™ Alarm Module until it clicks.
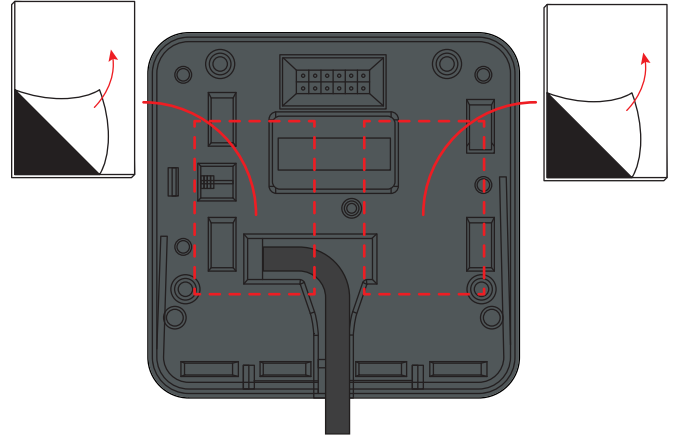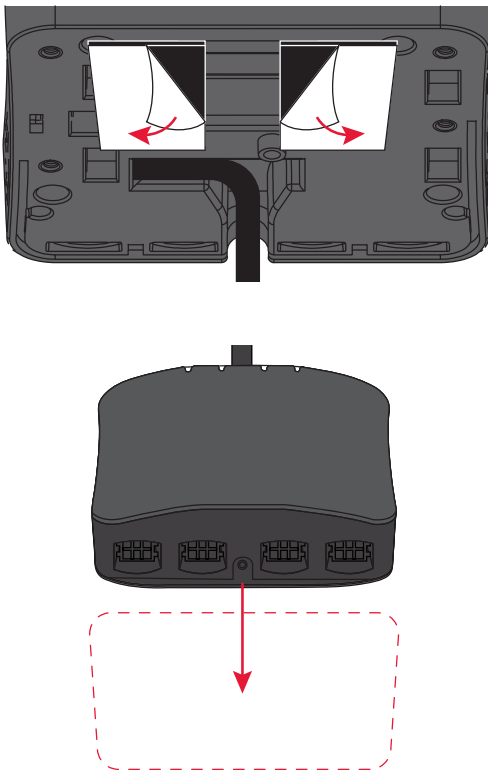
INSTALLING CORE II ALARM MODULE

MTI

1 Connect power to the Alarm Module with the Double-Sided System Tool.

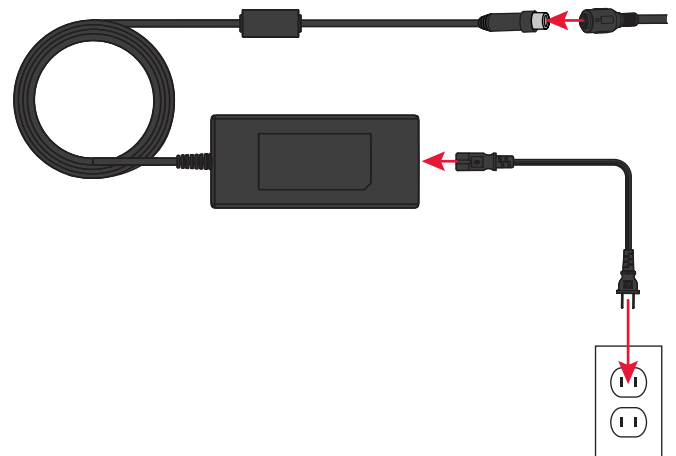**2** Remove backing of Velcro and attach to Alarm Module.

3 Remove backing from other side of Velcro. Place Alarm Module in the desired location.

**4** Connect the power supply and plug it into the nearest outlet.

The socket-outlet shall be installed near the equipment and shall be easily accessible.

---

www.mtigs.com | T:800.426.6844

MTI P/N M0440 rev A ©2020 MTI All Rights Reserved
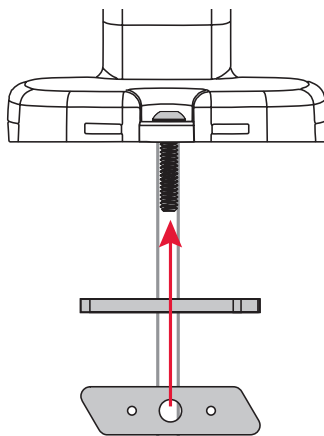
INSTALLING WATCH STAND

MTI

1 Attach the appropriate Spacer Adapter with the spacer screws using the Double-Sided System Tool. Make sure that the spacer number is facing down.
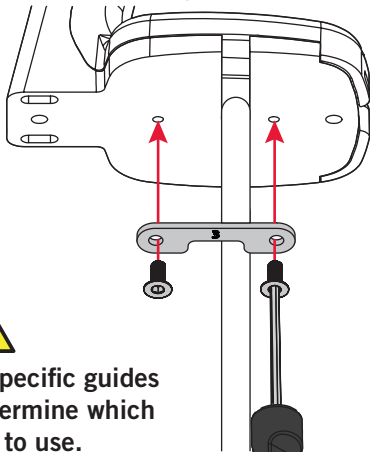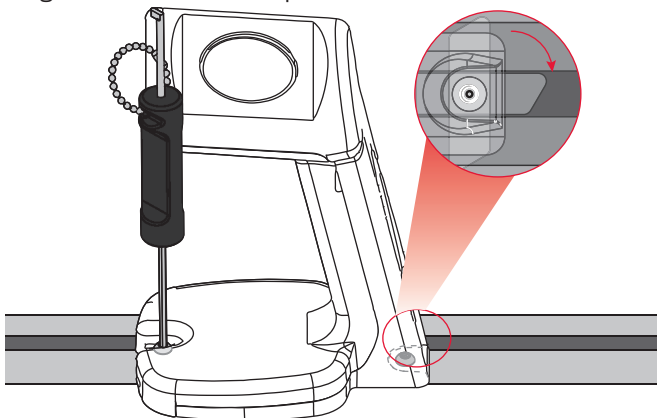
⚠️ **View the track specific guides for Micro to determine which hardware to use.**

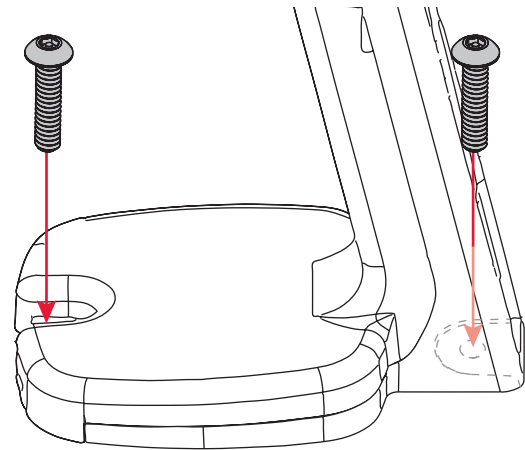**2** Insert the Mounting Tab Screws into the holes on either side of the watch stand base.

3 Rotate the mounting tabs onto the mounting screws until flush with bottom of screw. Make sure the DOTTED side of the mounting tabs is facing DOWN.
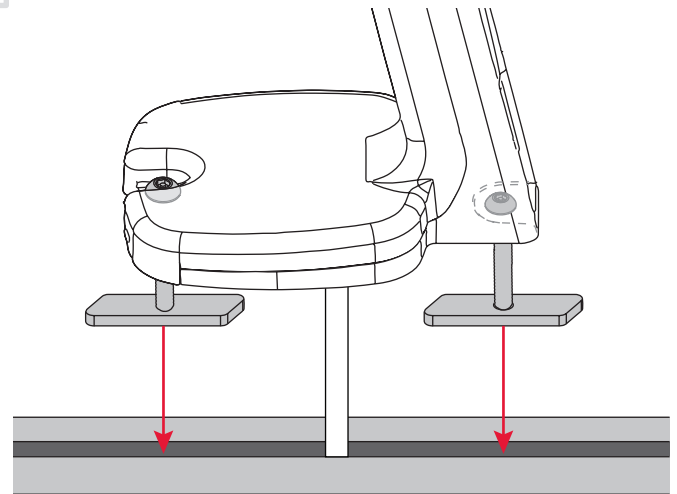
4 Align the mounting tabs and press them into the track.

5 Hold the position steady with one hand. With your other hand use the Double-Sided System Tool to turn the screws to move the mounting tabs into position. Tighten screws to lock position to the fixture.

6 Plug in OEM charger to OEM power supply. OEM cable will be routed through base. Place secured watch on watch stand.