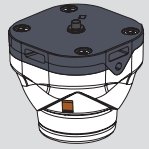**NOTES BEFORE INSTALLING:** Do not overtighten screws. Overtightening screws may damage the threads on devices and MTI products. Disable alarm before installation and enable alarm after installation is complete.

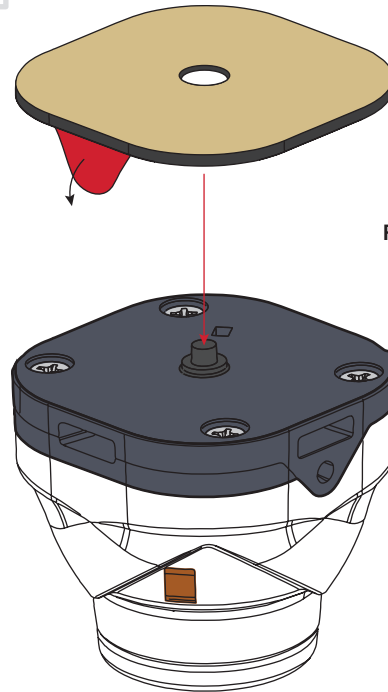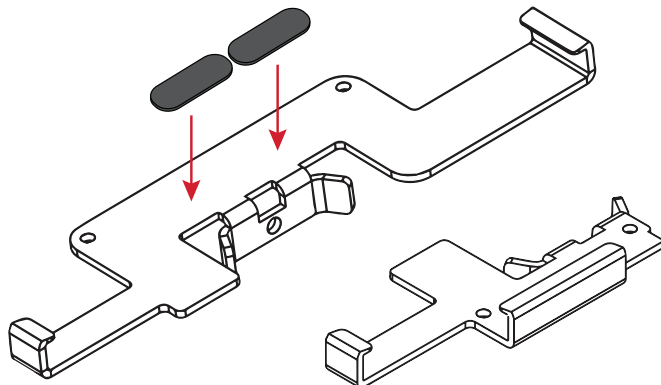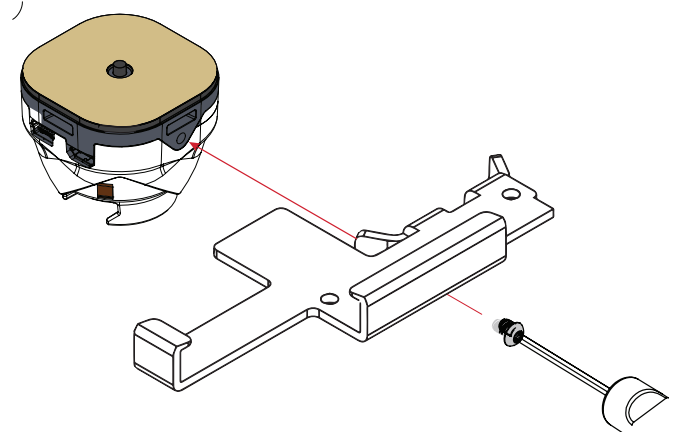|						
Freedom Micro® Puck	VHB with Transfer	Bracket	Neoprene Pads	Double-Sided System Tool	Security Screws	Alcohol Wipe

1
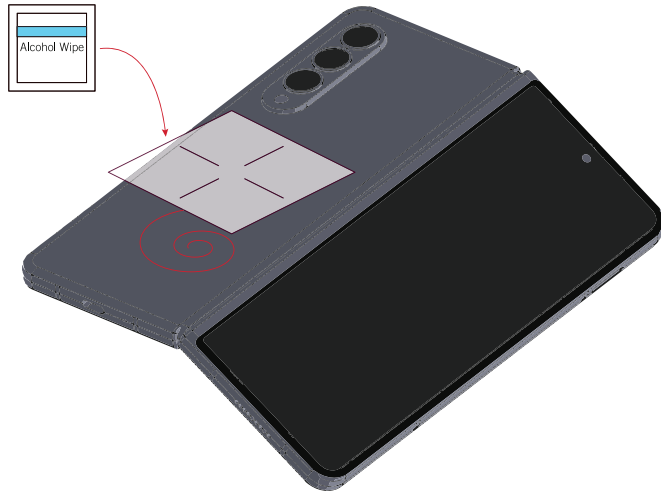
2

Red side of VHB should face puck, tan side should face device for proper adhesion.
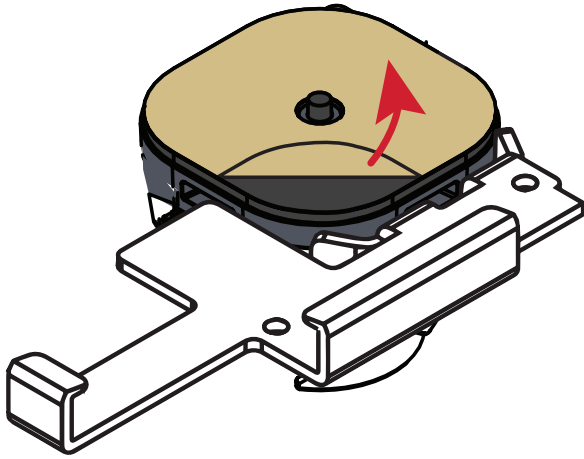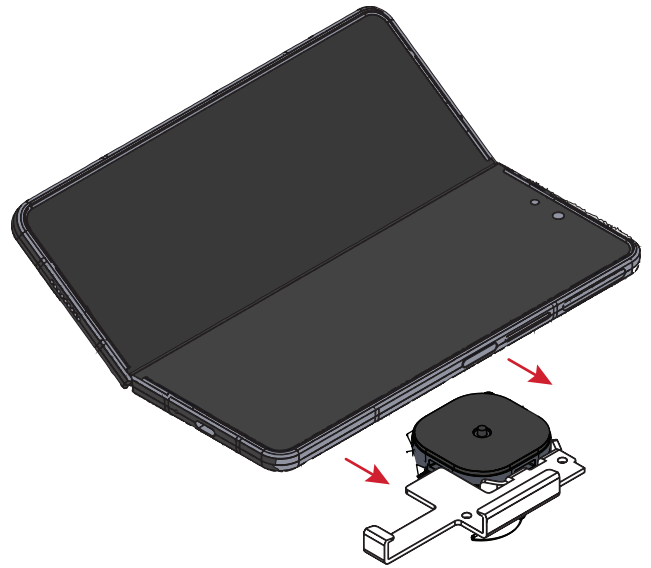
3
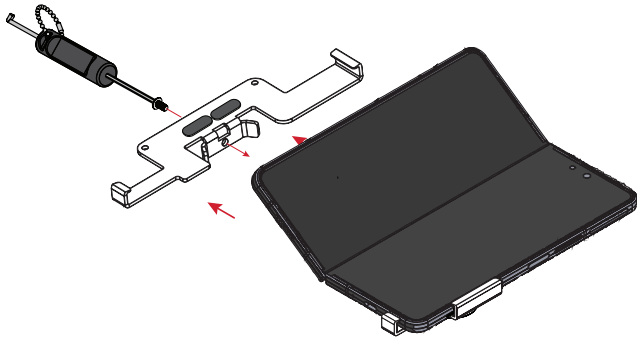

Neoprene pads should cover part number on bracket

4

1

5

6

7

8