1 Hour

1 person required

Link to Unboxing Video

Warranty

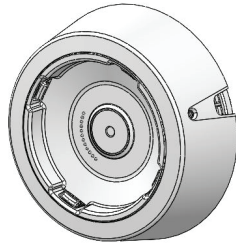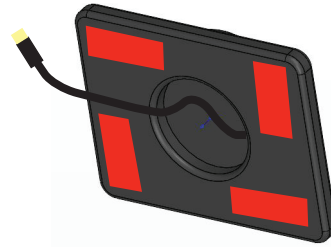**Link to Installation Video**

Fixture
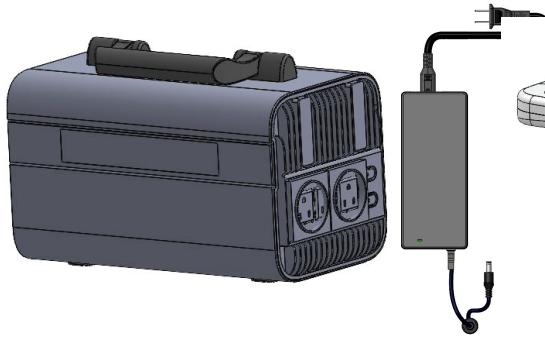
BATTERY/POWER SUPPLY
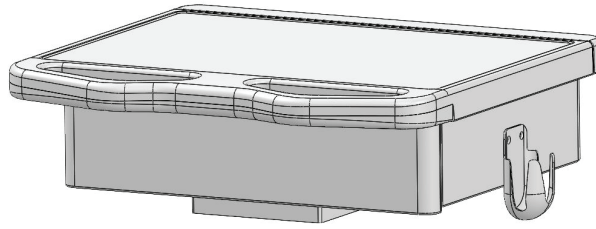
TRAY
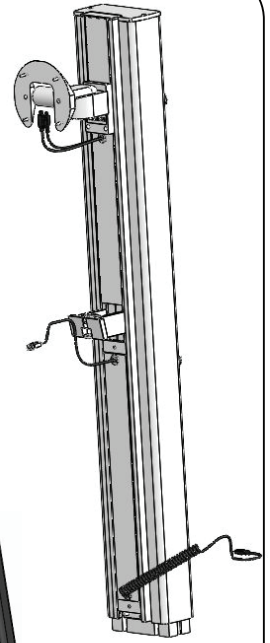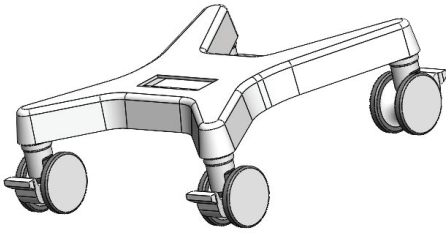
BASE

RAPIDDOC

EZ BACK
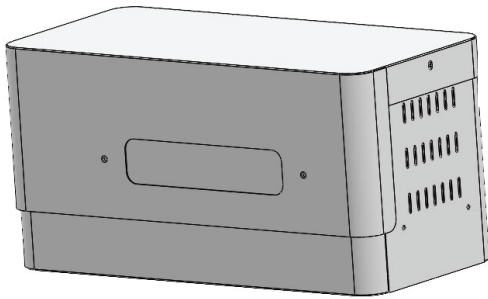
SPLINE

BATTERY CASE
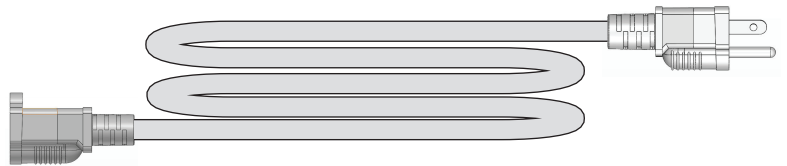
POWER CABLE EXTENSION

Tools

LYNX
INNOVATION
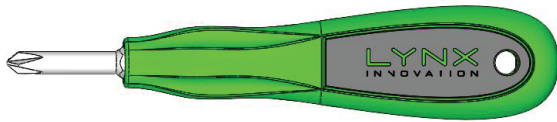
MTI | 800.426.6844
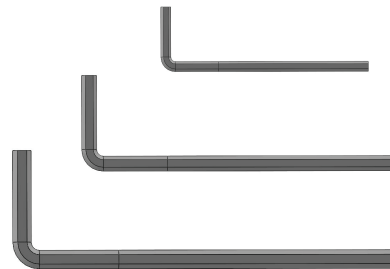
Hardware

X2

X4

X4

X1

Installation Guide

1

x4
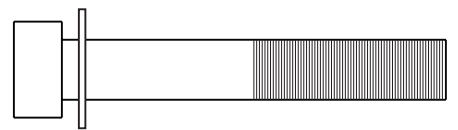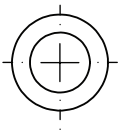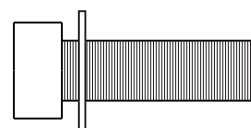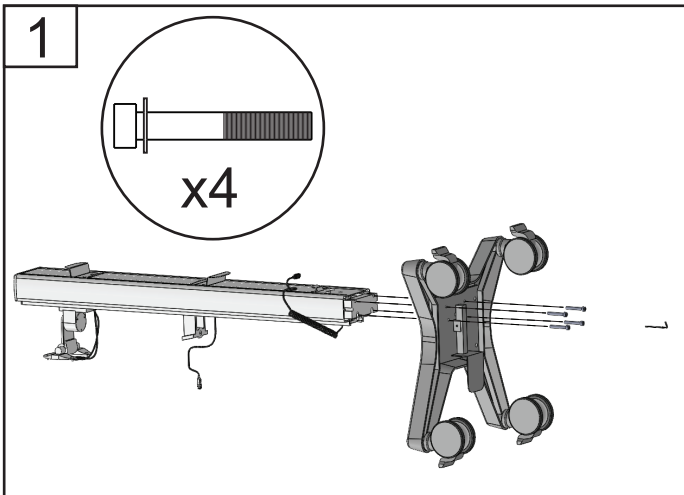
Install the **SPLINE** onto the **BASE** using the **SOCKET HEAD SCREWS** and the provided **ALLEN WRENCH t**o secure in place.

2
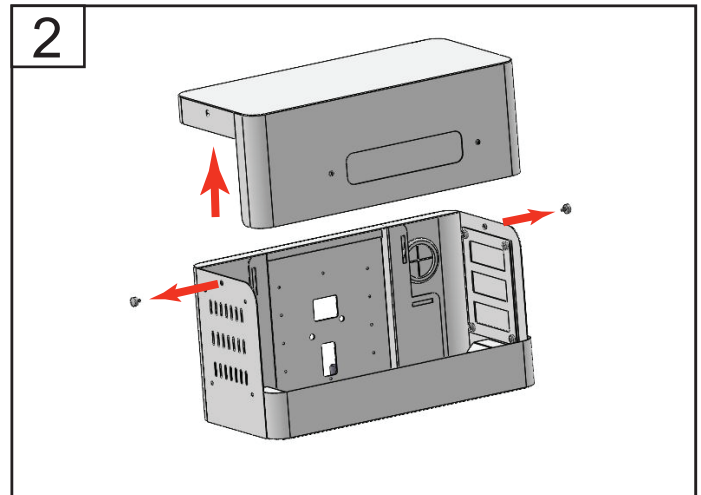
Remove the cover to the **BATTERY BOX** by loosening the side thumbscrews and lifting the cover off the box. Save screws and cover for re-installation.
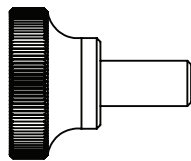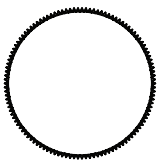
3

x2
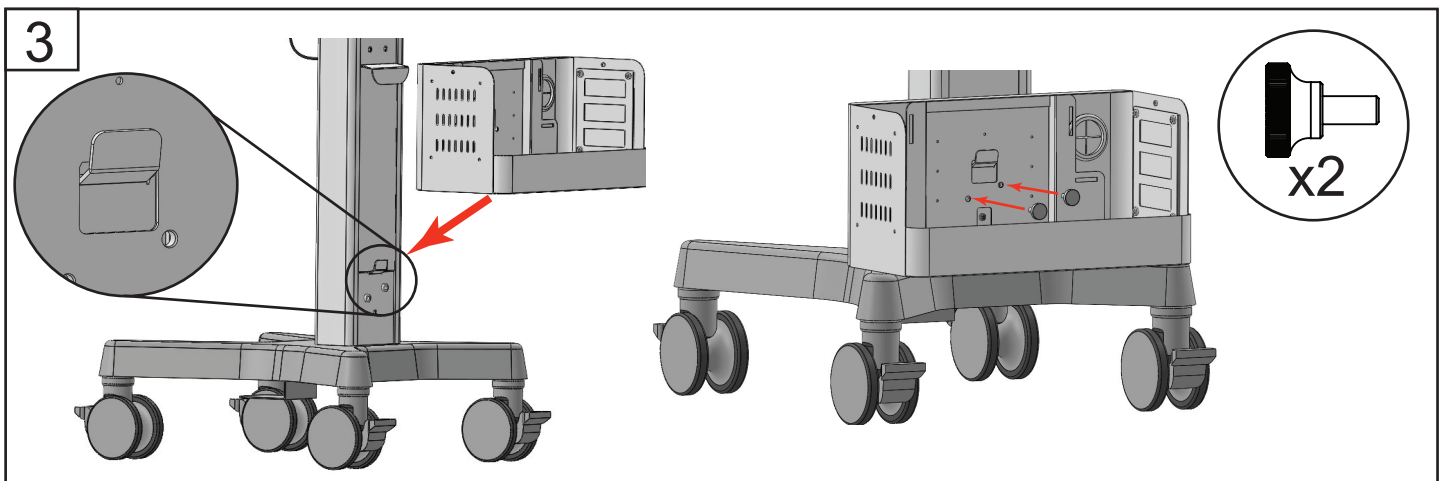
Install the box to the cart placing the box onto the hook. Secure the box to the cart with the provided **THUMB-SCREWS**.

4
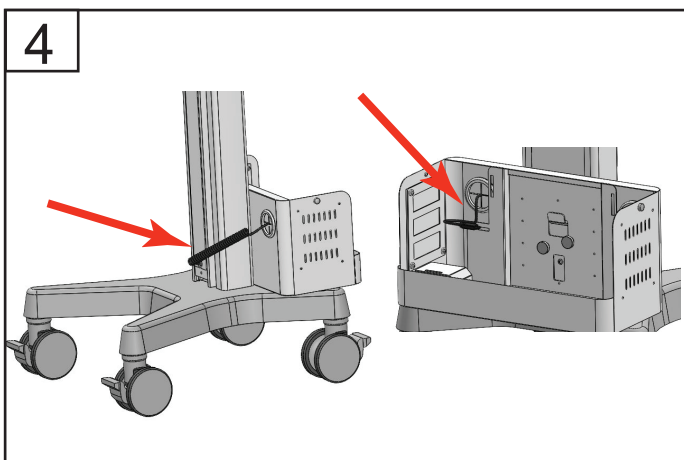
Push coiled cable from the bottom of the **SPLINE** into the grommet of the **BATTERY BOX**..

5
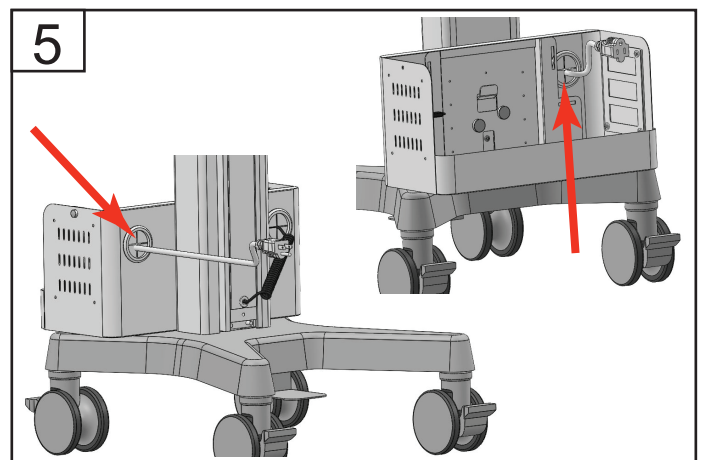
Install the **POWER CABLE EXTENSION** into the **BATTERY BOX** by pushing it through the other grommet.

6

Place **BATTERY** into the **BATTERY CASE** plugging the USB C connector to the USB C connector output on the **BATTERY**. Then put on the **BATTERY BOX cover** and tighten the side thumbscrews.

7

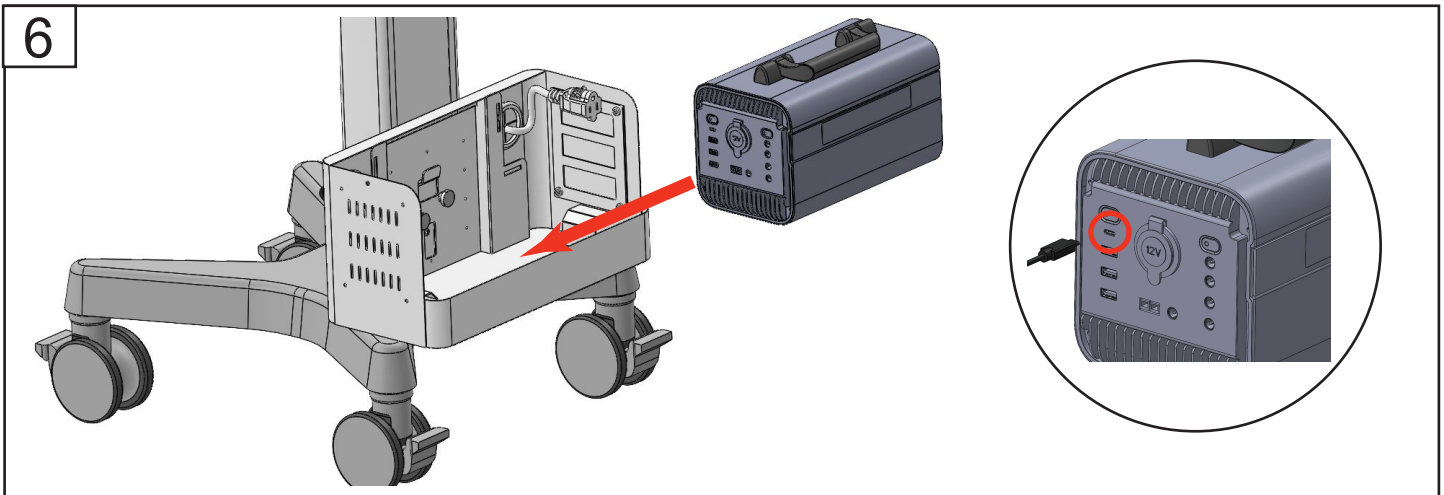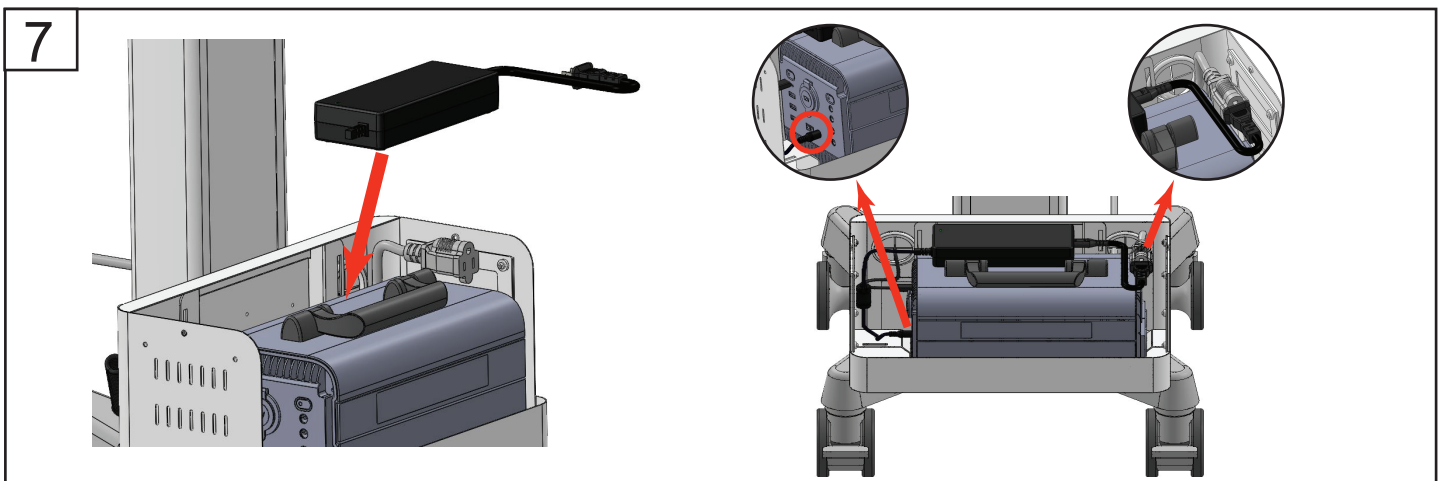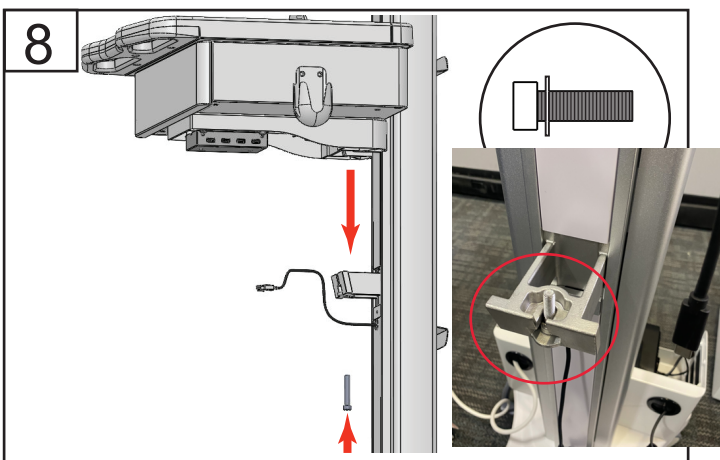Install the **POWER SUPPLY** by placing it on top of the battery. Plug in the **POWER SUPPLY** into the **BATTERY** and into the **POWER CABLE EXTENSION**. Secure the handle to the ladder tie on top of the battery.

8

Place **TRAY** onto the bracket and secure with **SOCKET HEAD SCREW**. Insert the screw into the slot from the front, not from the bottom.

9
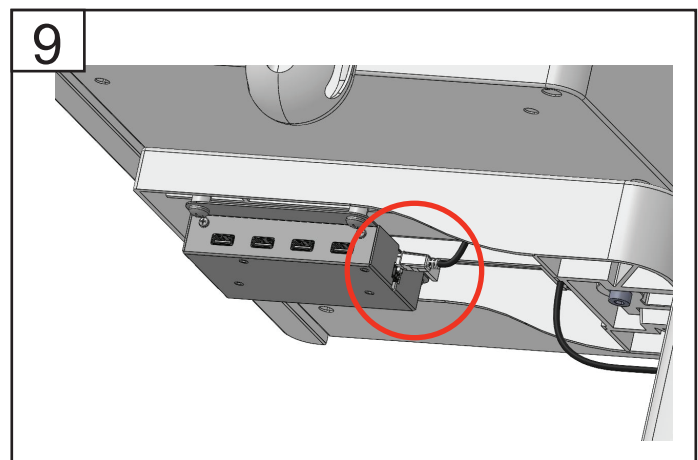
Plug in the cable to the USB hub.

10

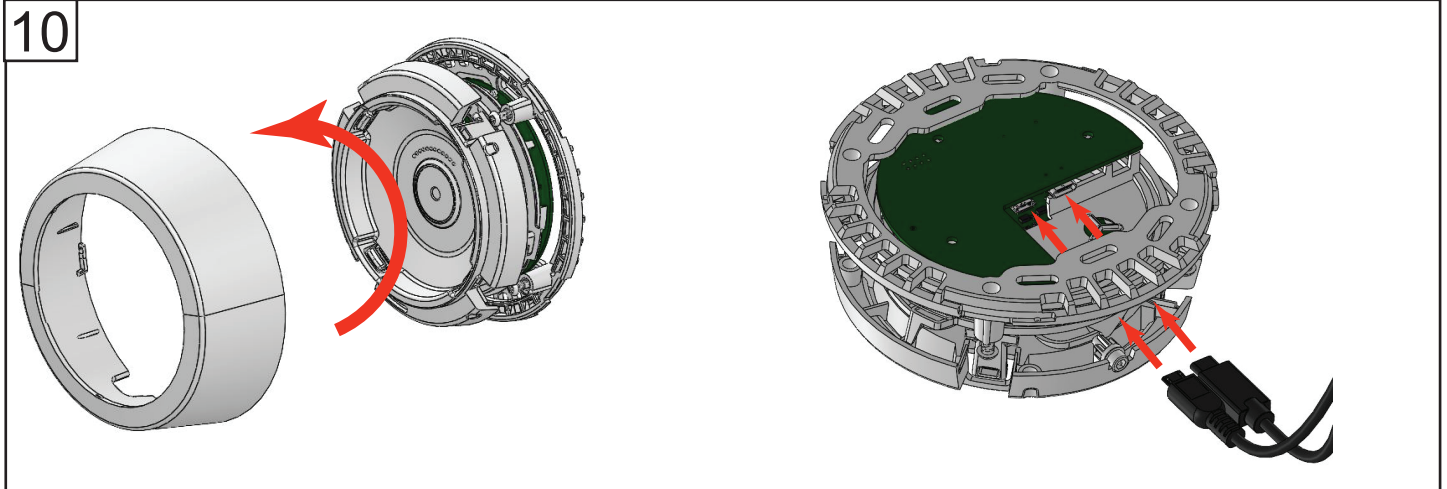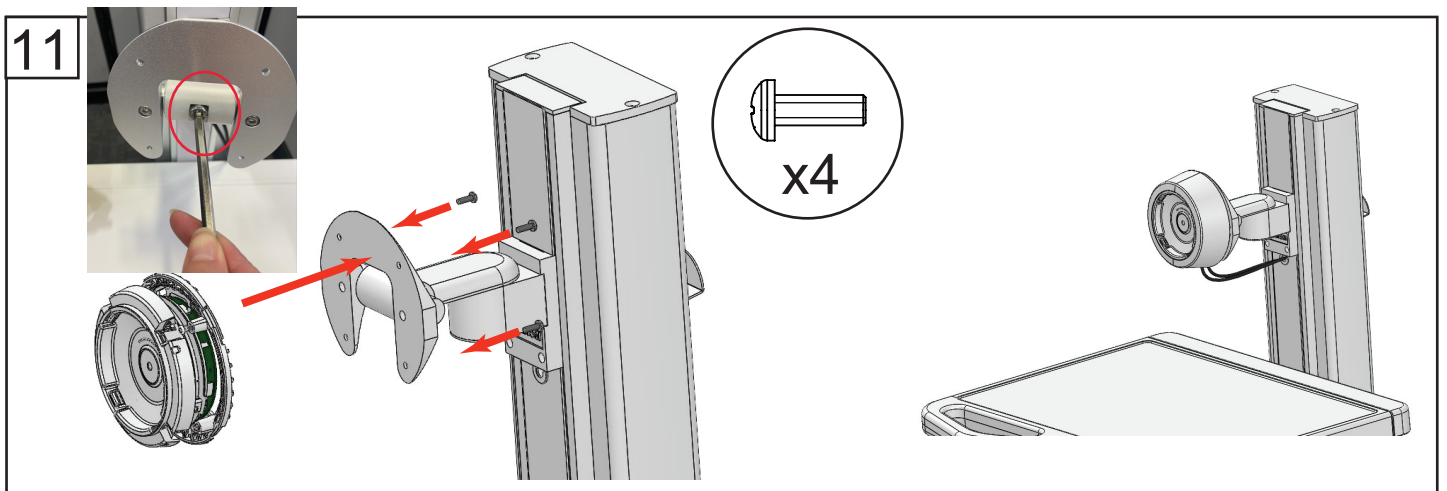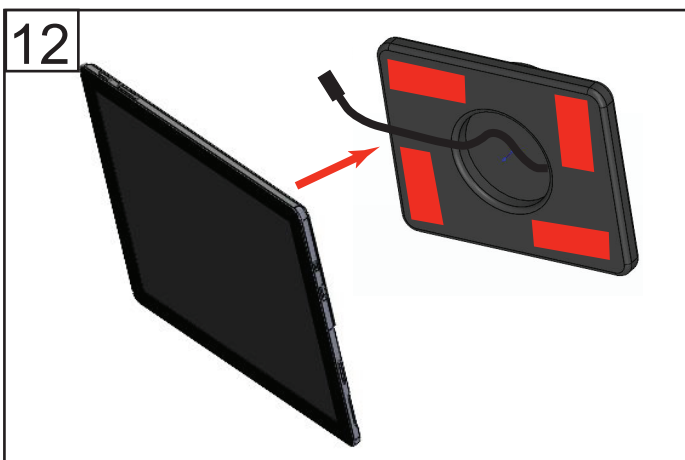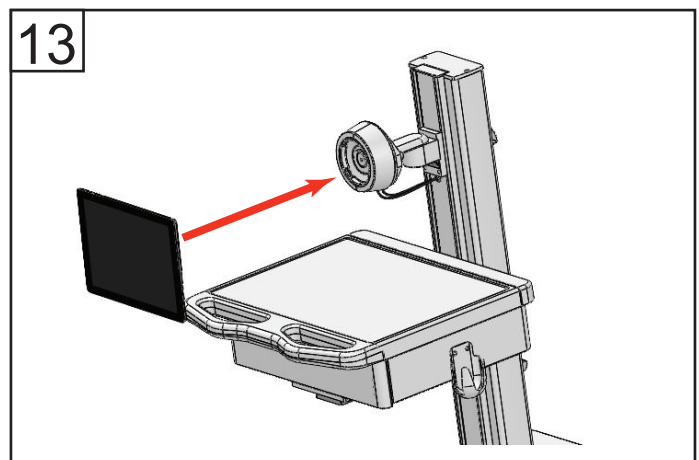Remove the cover to the **RAPIDDOC** and set aside for re-installation. Plug in the 2 cables coming from the **SPLINE** to the **RAPIDDOC**,

11

x4

Use an Allen wrench to remove the center screw on the RapidDoc mount; this allows tilt up of the tablet. Mount the **RAPIDDOC** to the mounting plate using the supplied **PAN HEAD SCREWS**. Put cover back on and snap in to secure.

12

Attach the tablet (not included) to the **EZ BACK** by peeling the protective film off the VHB and firmly pressing the tablet to the **EZ BACK**. Plug in the power cable to the tablet.

13

Lock the tablet to the **RAPIDDOC**.